
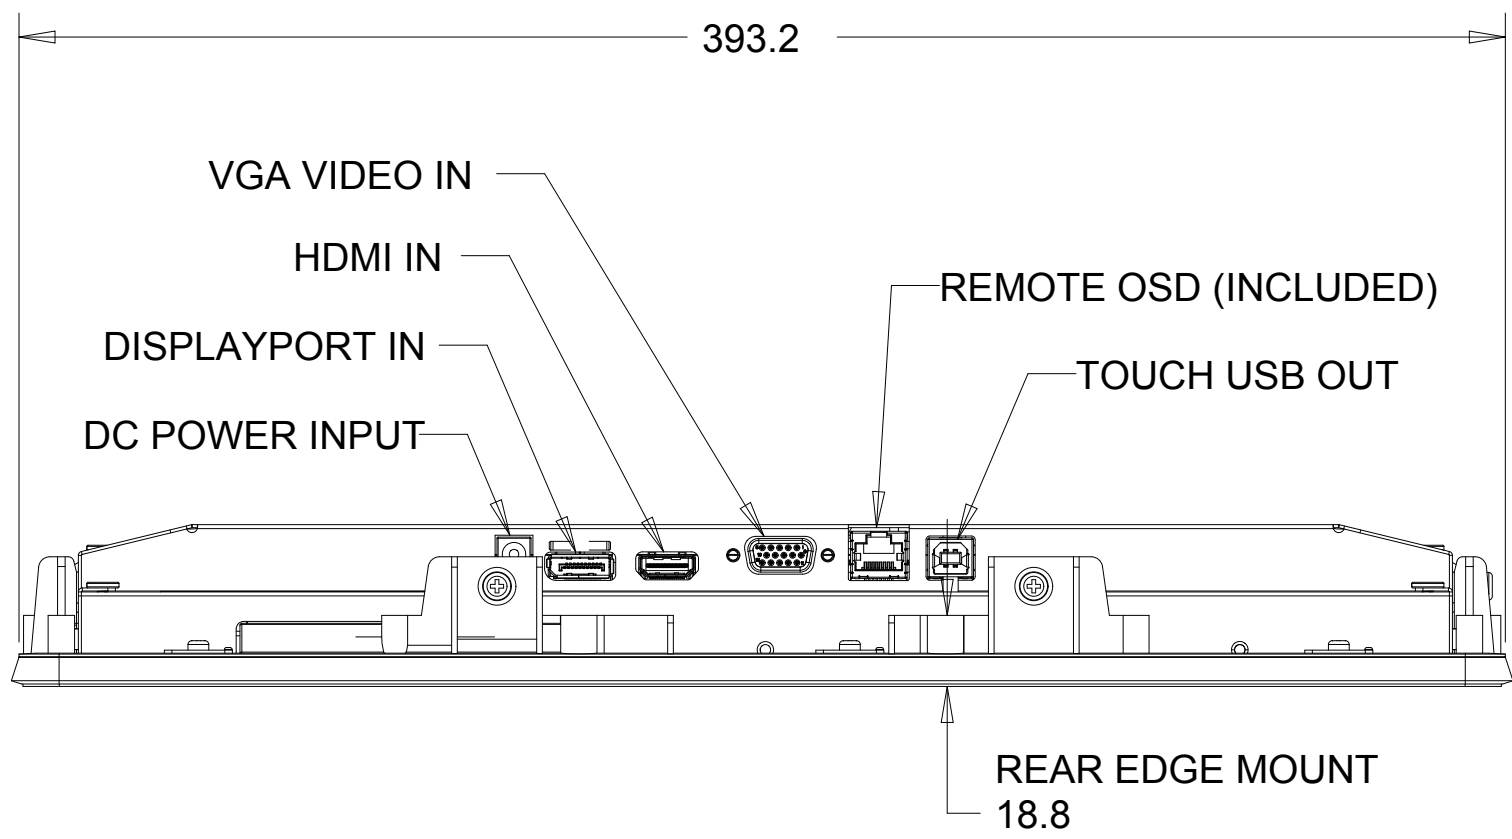
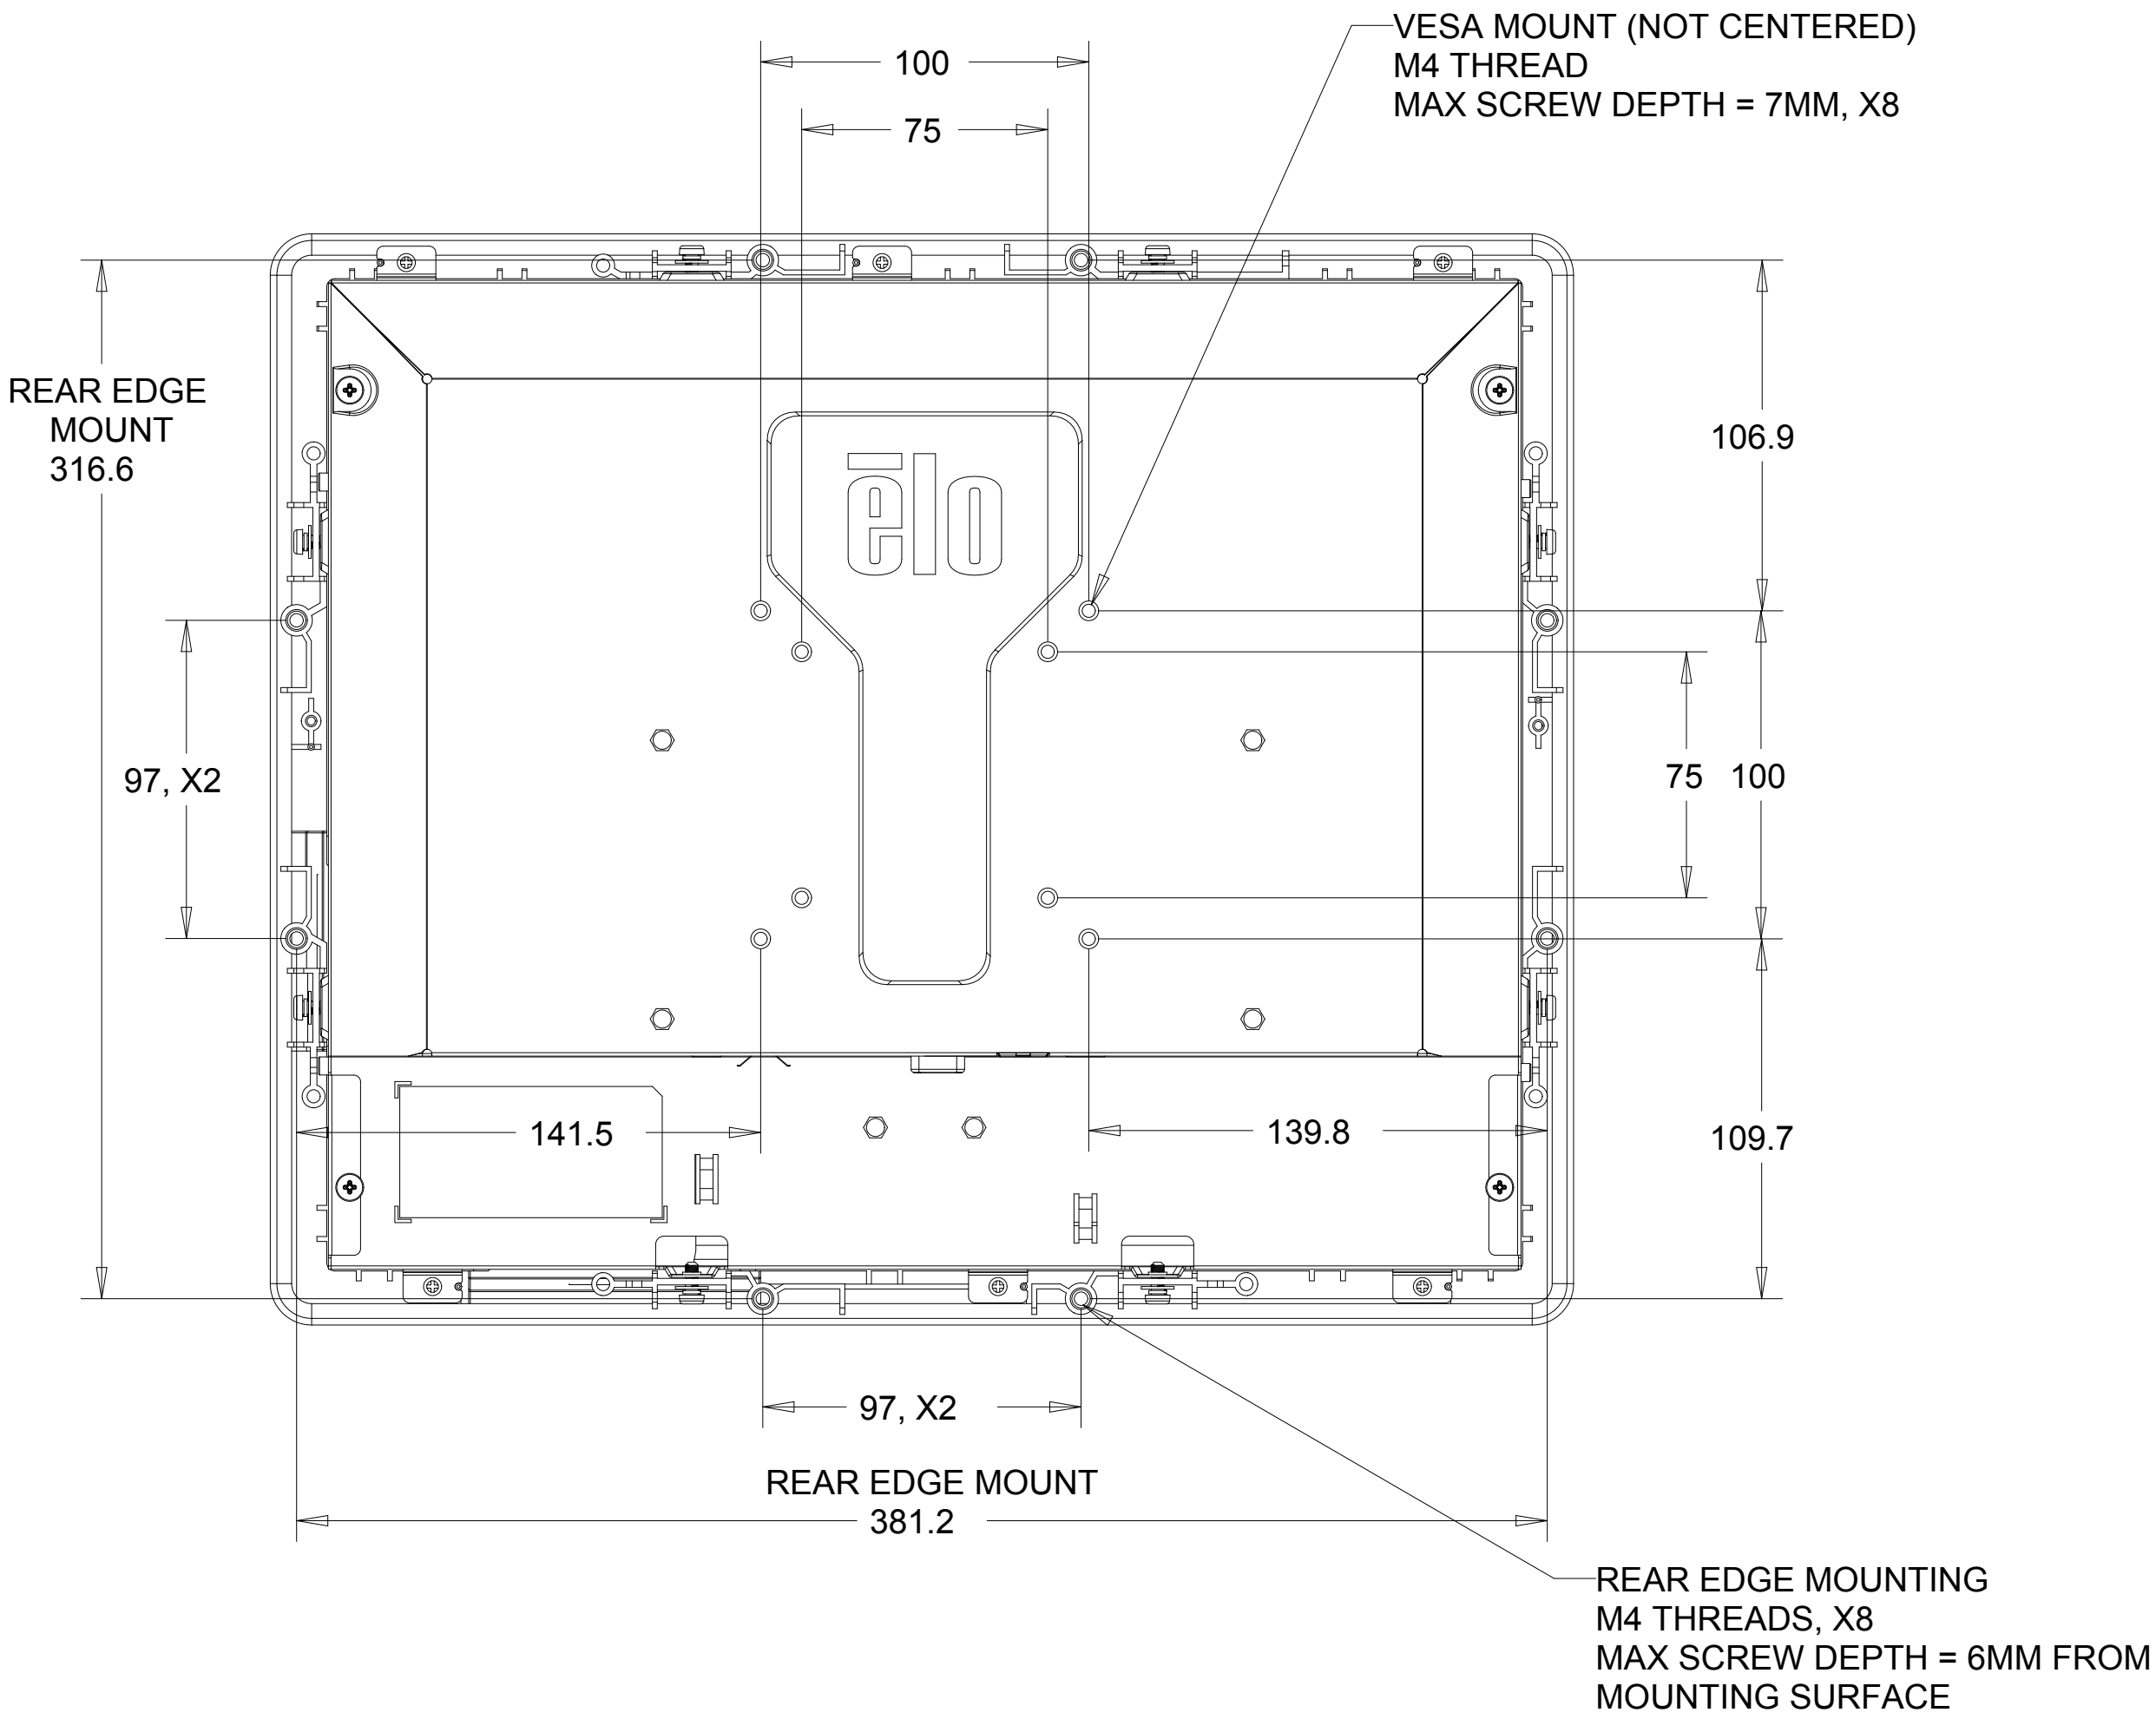
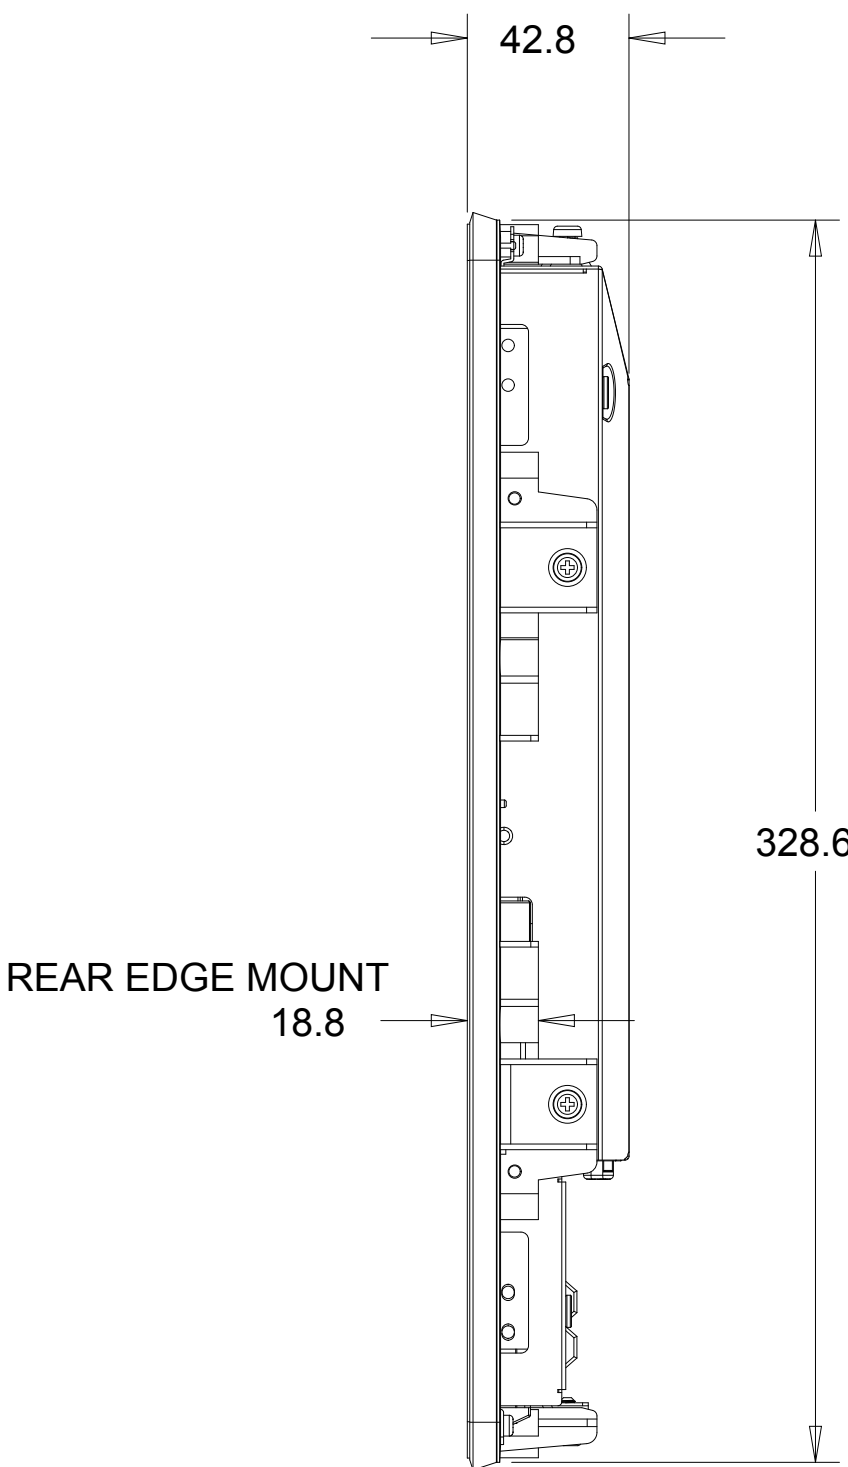






PROJECTED CAPACITIVE MODEL

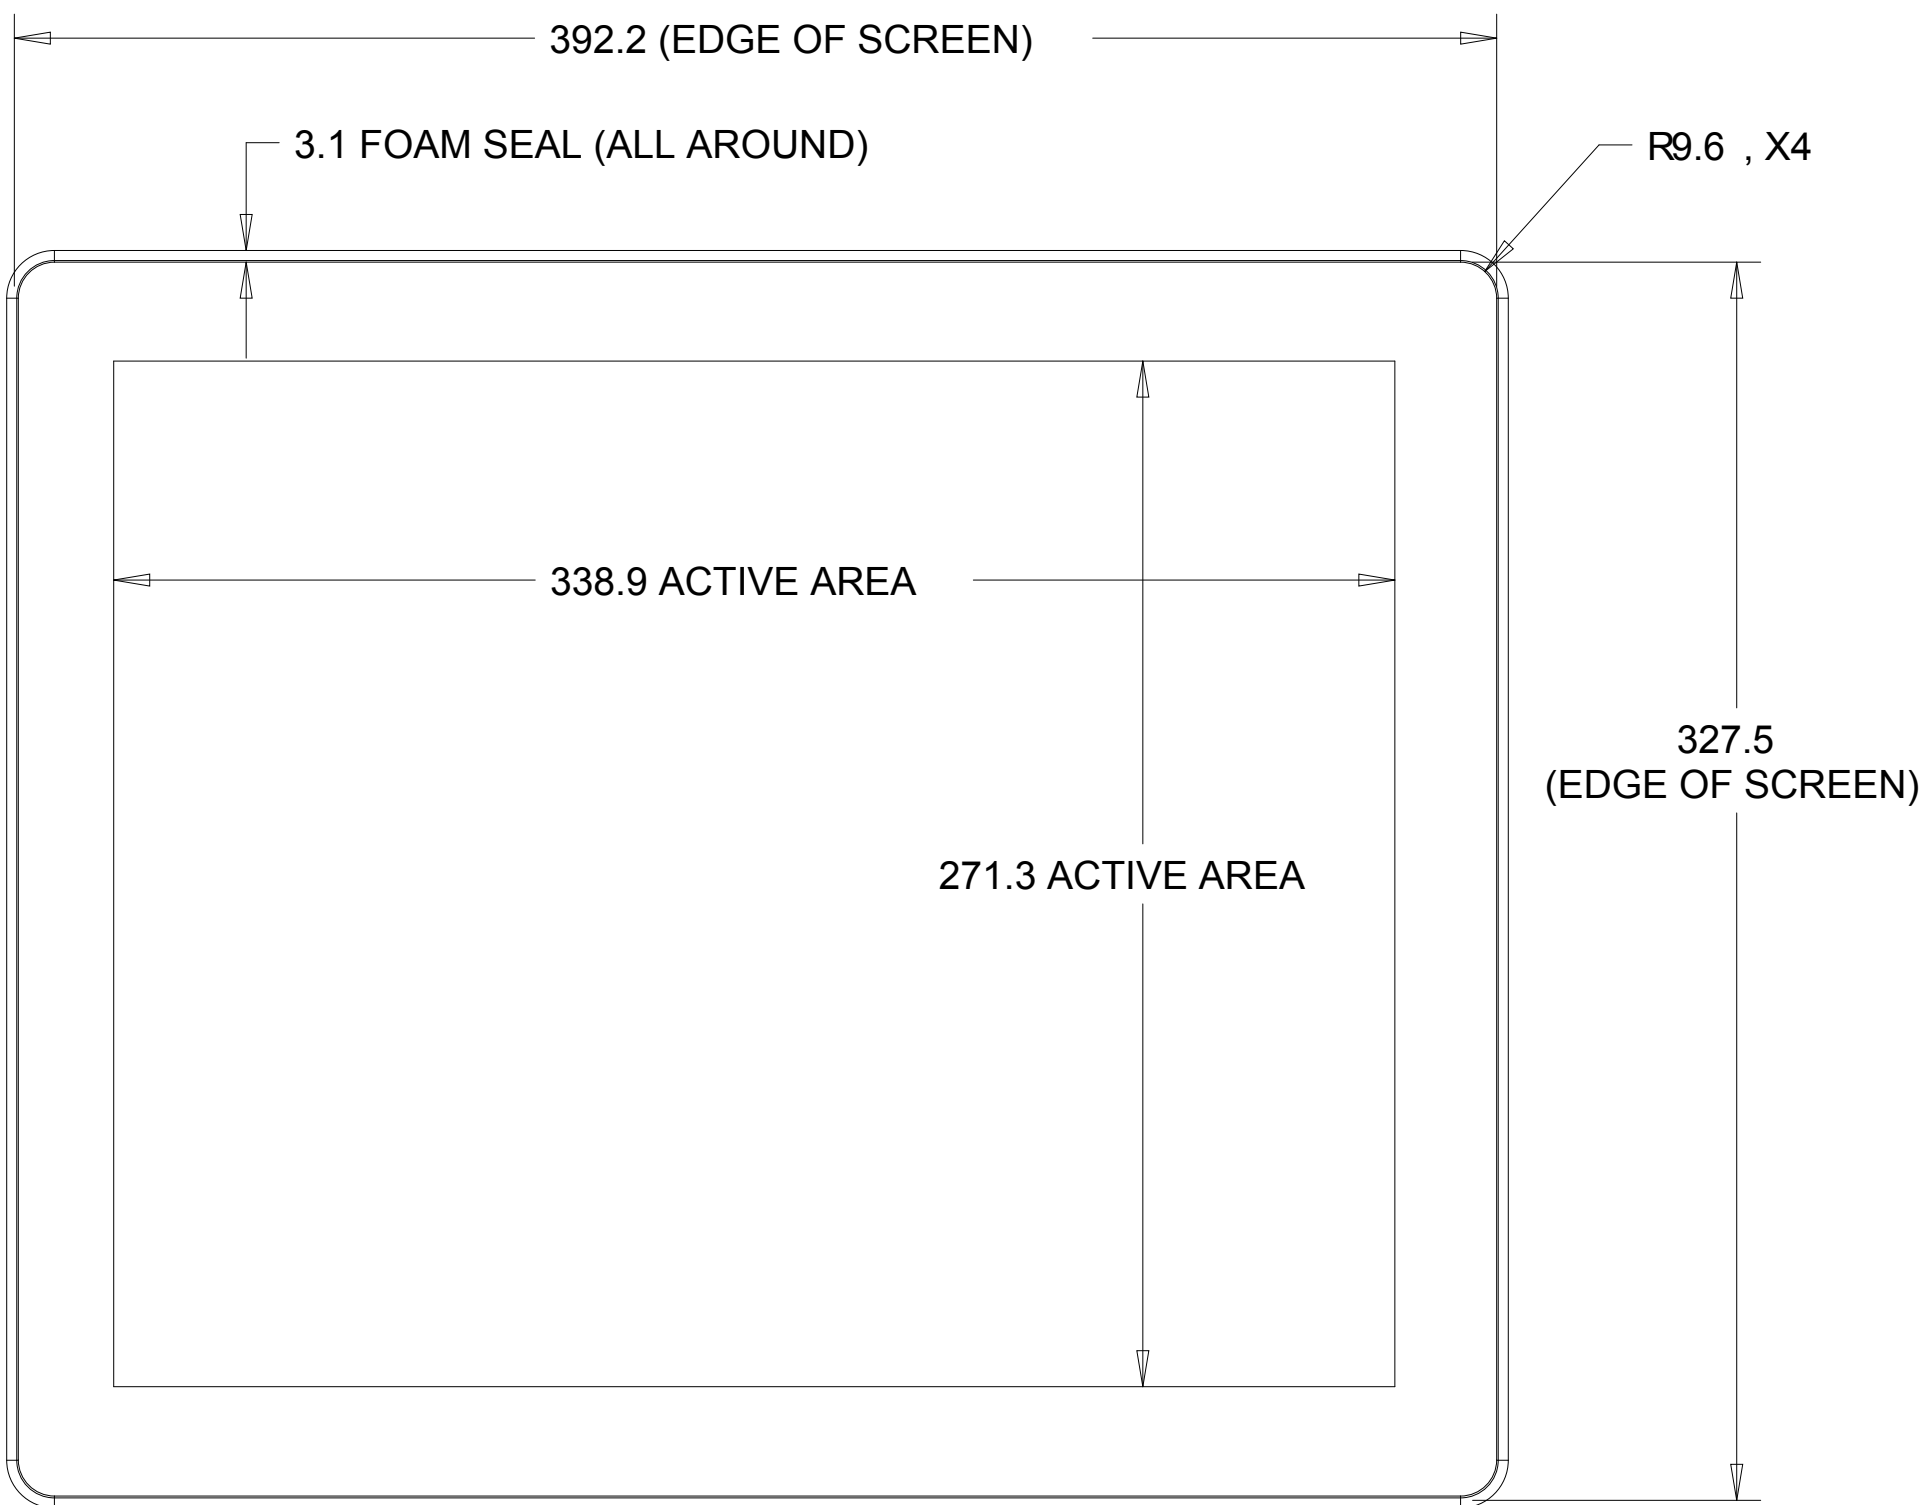



PROJECTED CAPACITIVE MODEL

WITH FLUSH MOUNTING BRACKETS (4 INCLUDED)





REPLACEMENT BRACKET KIT P/N E129564 AVAILABLE SEPARATELY

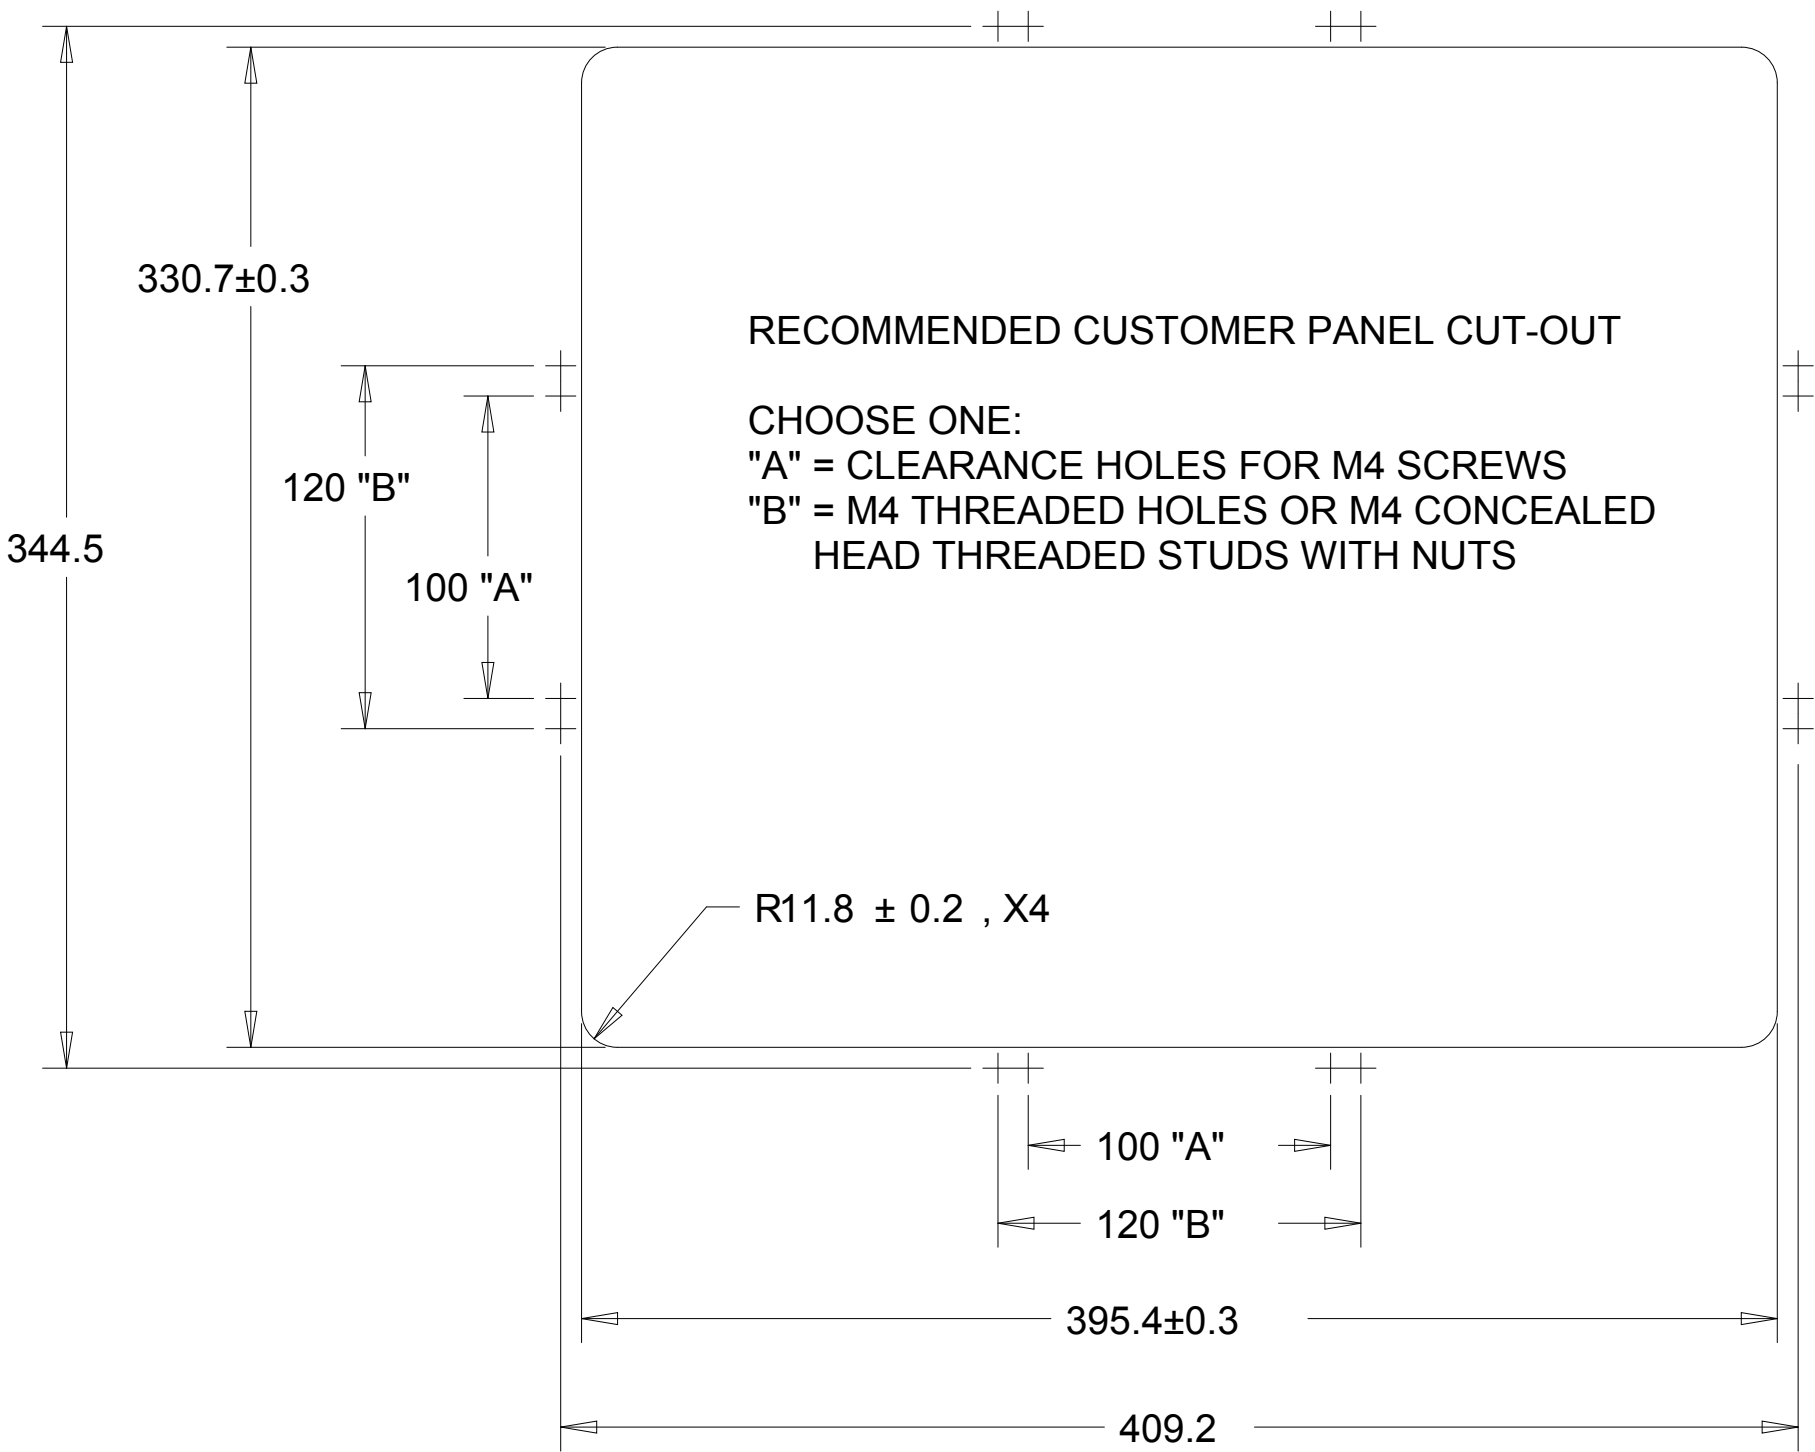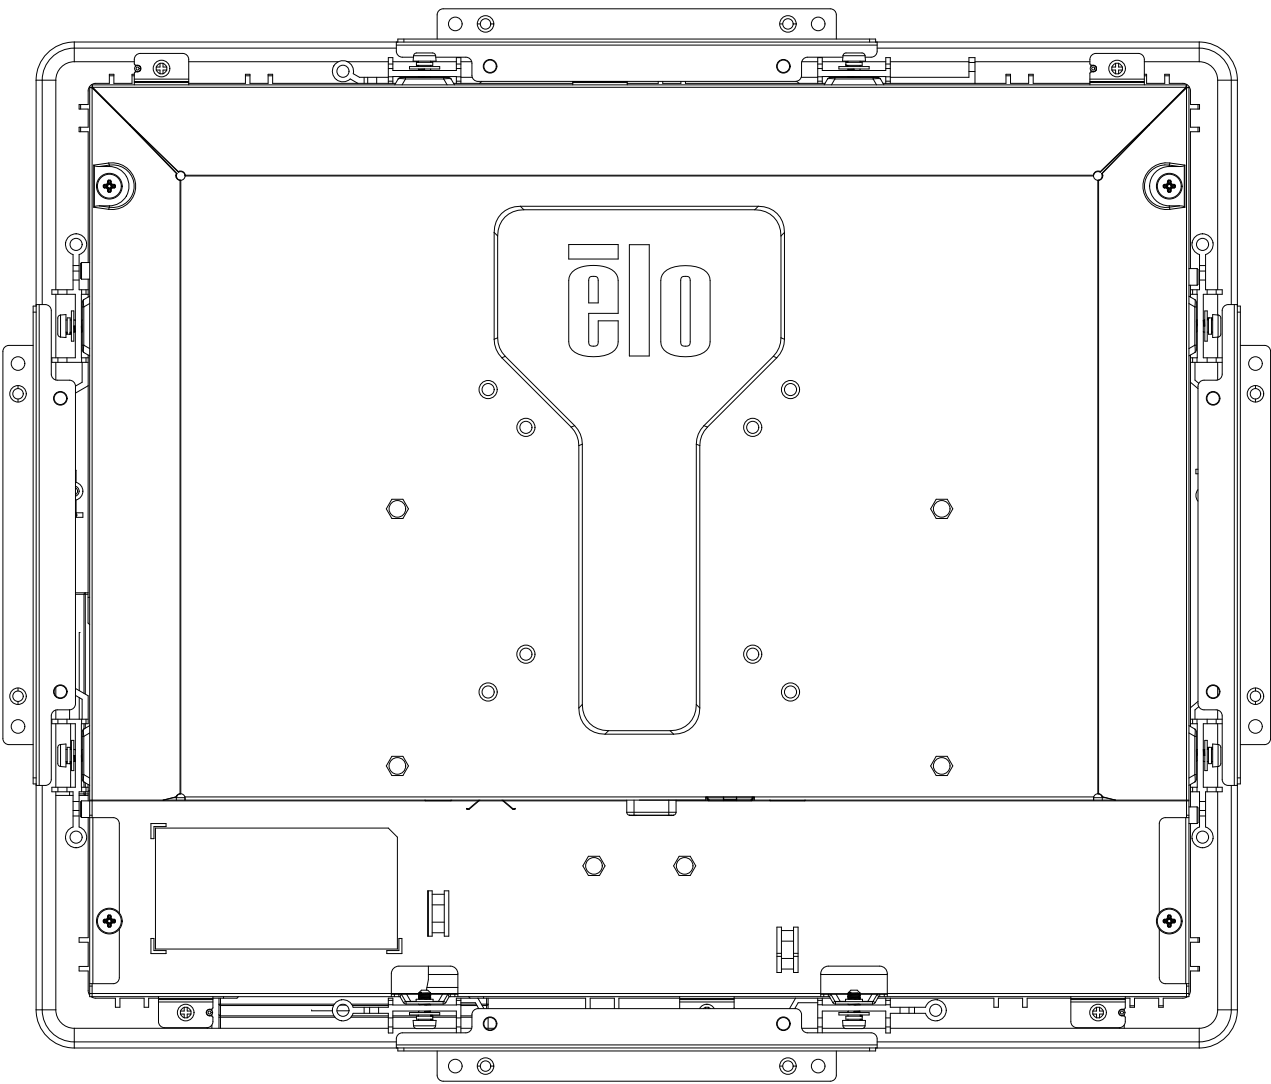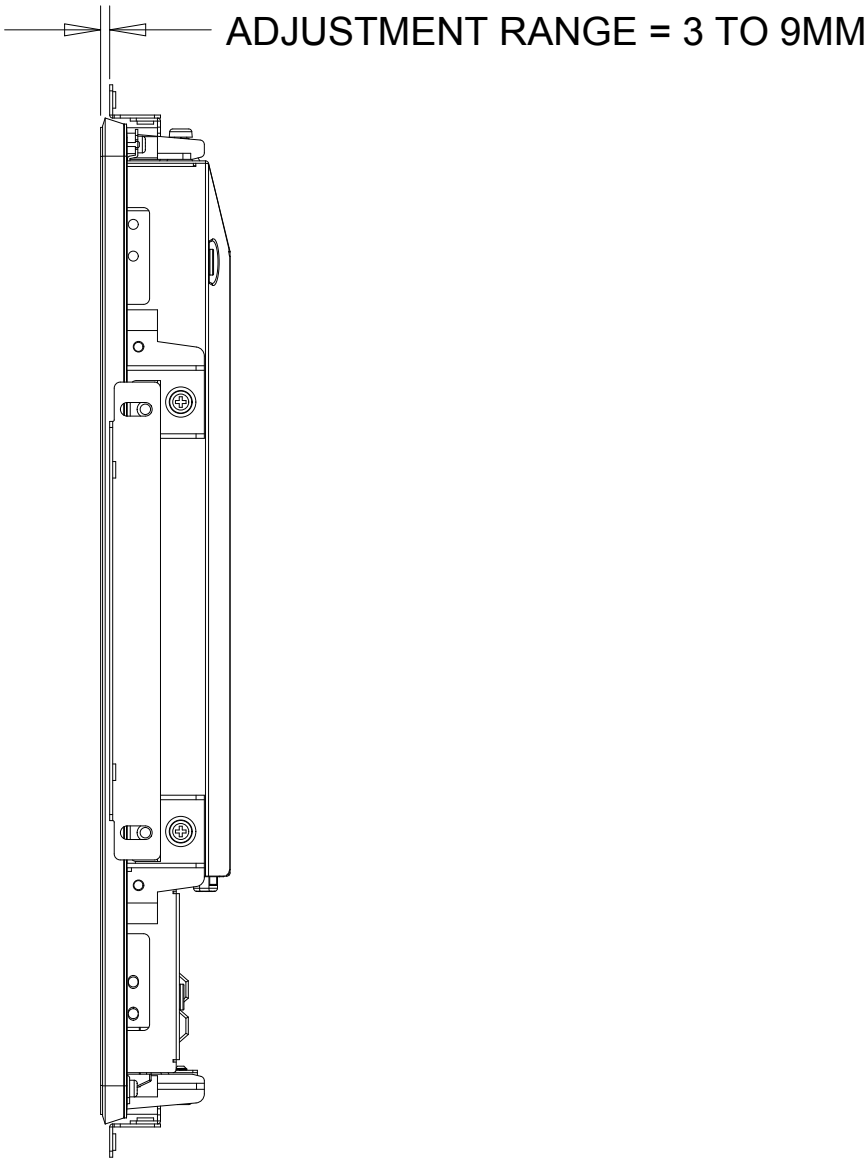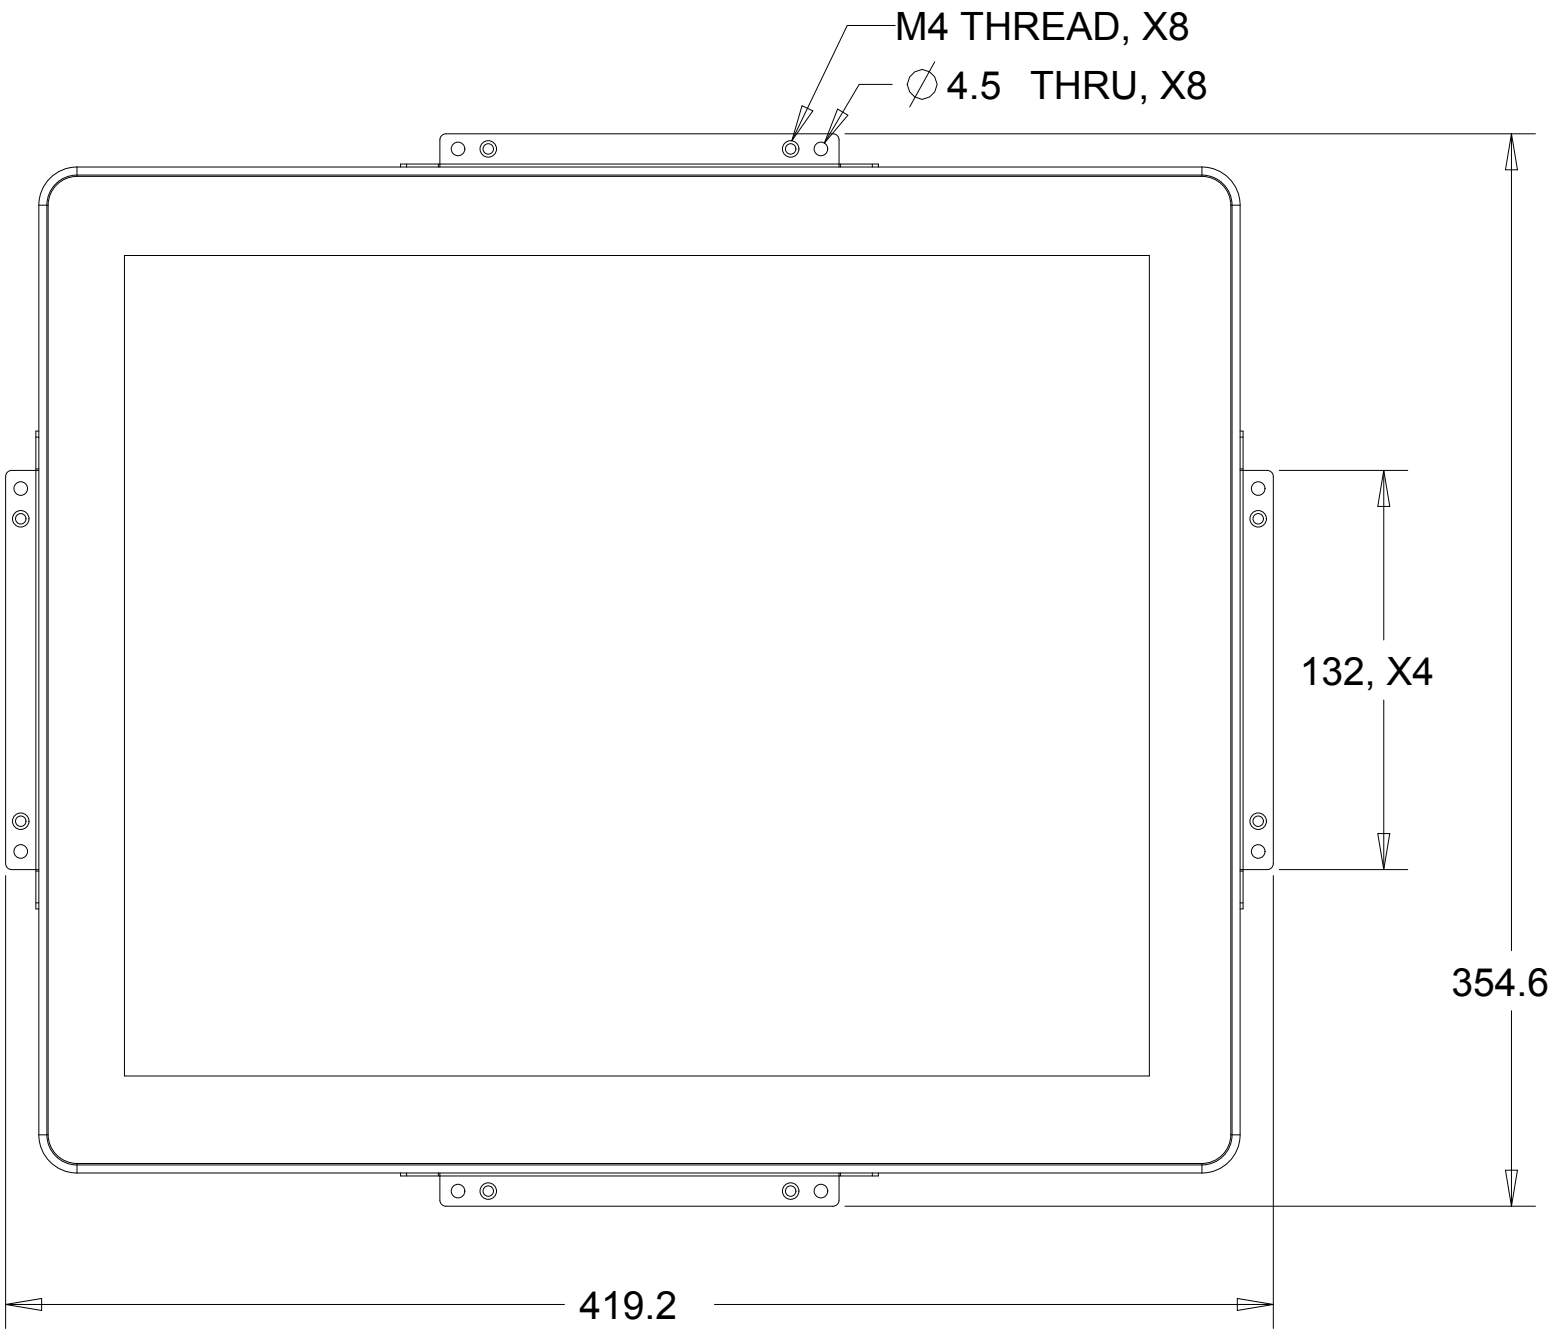


- INSTALLATION NOTES:
1. ATTACH BRACKET "A" TO CUSTOMER PANEL (ALL FOUR SIDES) WITH INCLUDED SCREWS
 2. ATTACH BRACKET "B" TO TOUCHMONITOR (ALL FOUR SIDES)
 3. PLACE TOUCHMONITOR INTO CUSTOMER PANEL OPENING, TAKING CARE NOT TO DAMAGE FOAM SEAL
 4. ADJUST DEPTH OF BRACKETS "B" SO THE MONITOR IS FLUSH WITH CUSTOMER PANEL
 5. SECURE TOUCHMONITOR TO BRACKET "B" FROM BEHIND WITH INCLUDED SCREWS

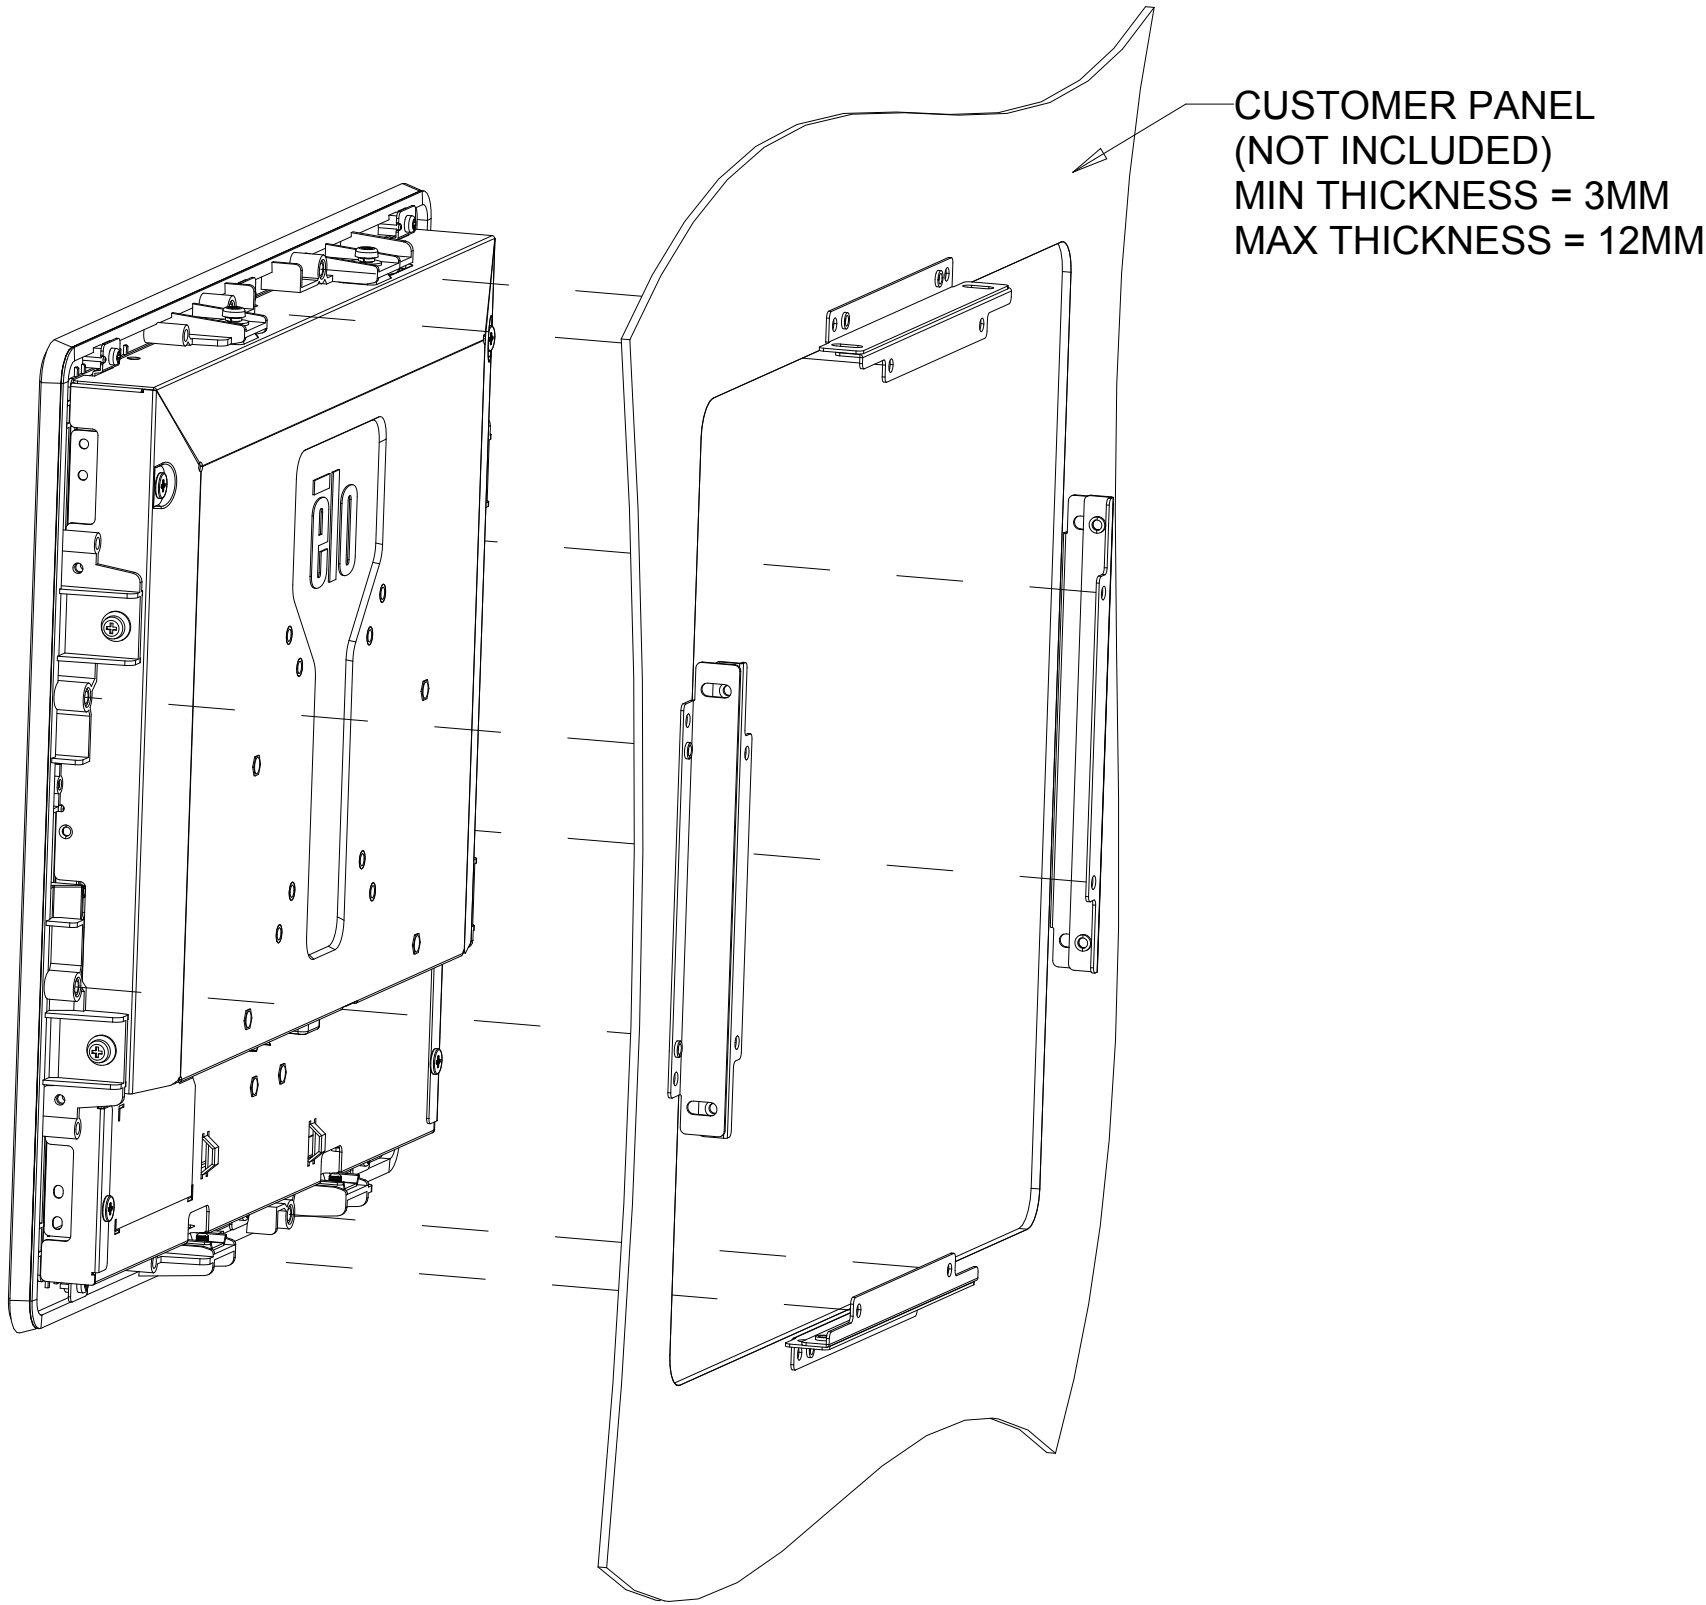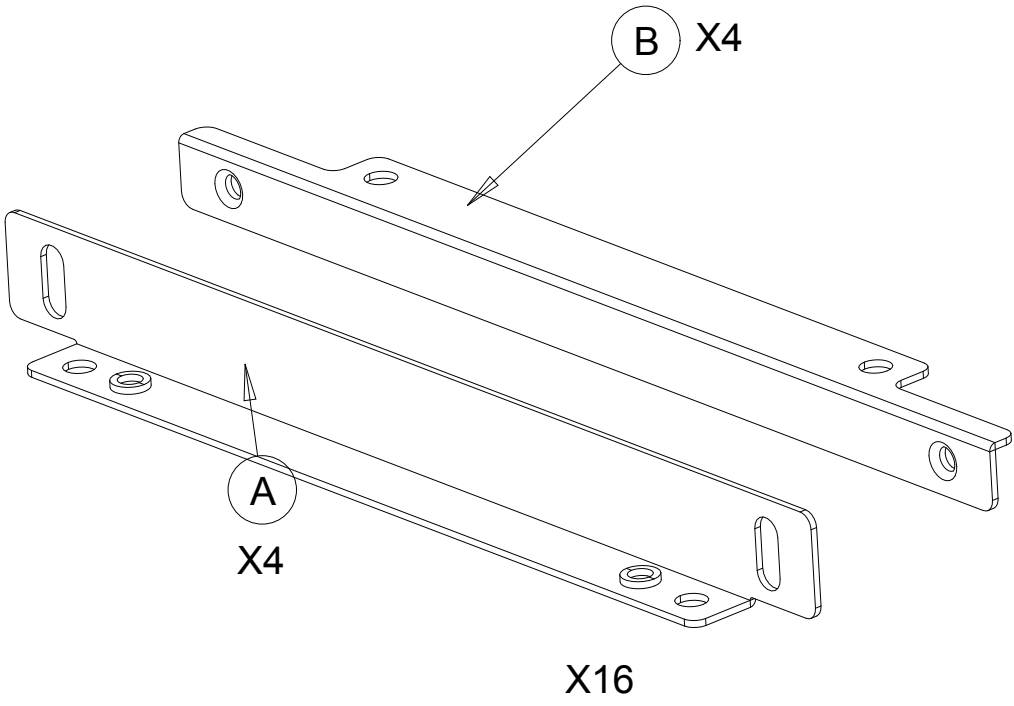

INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL


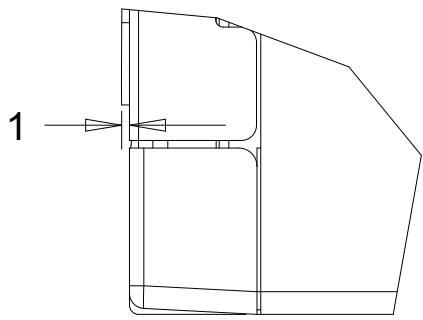
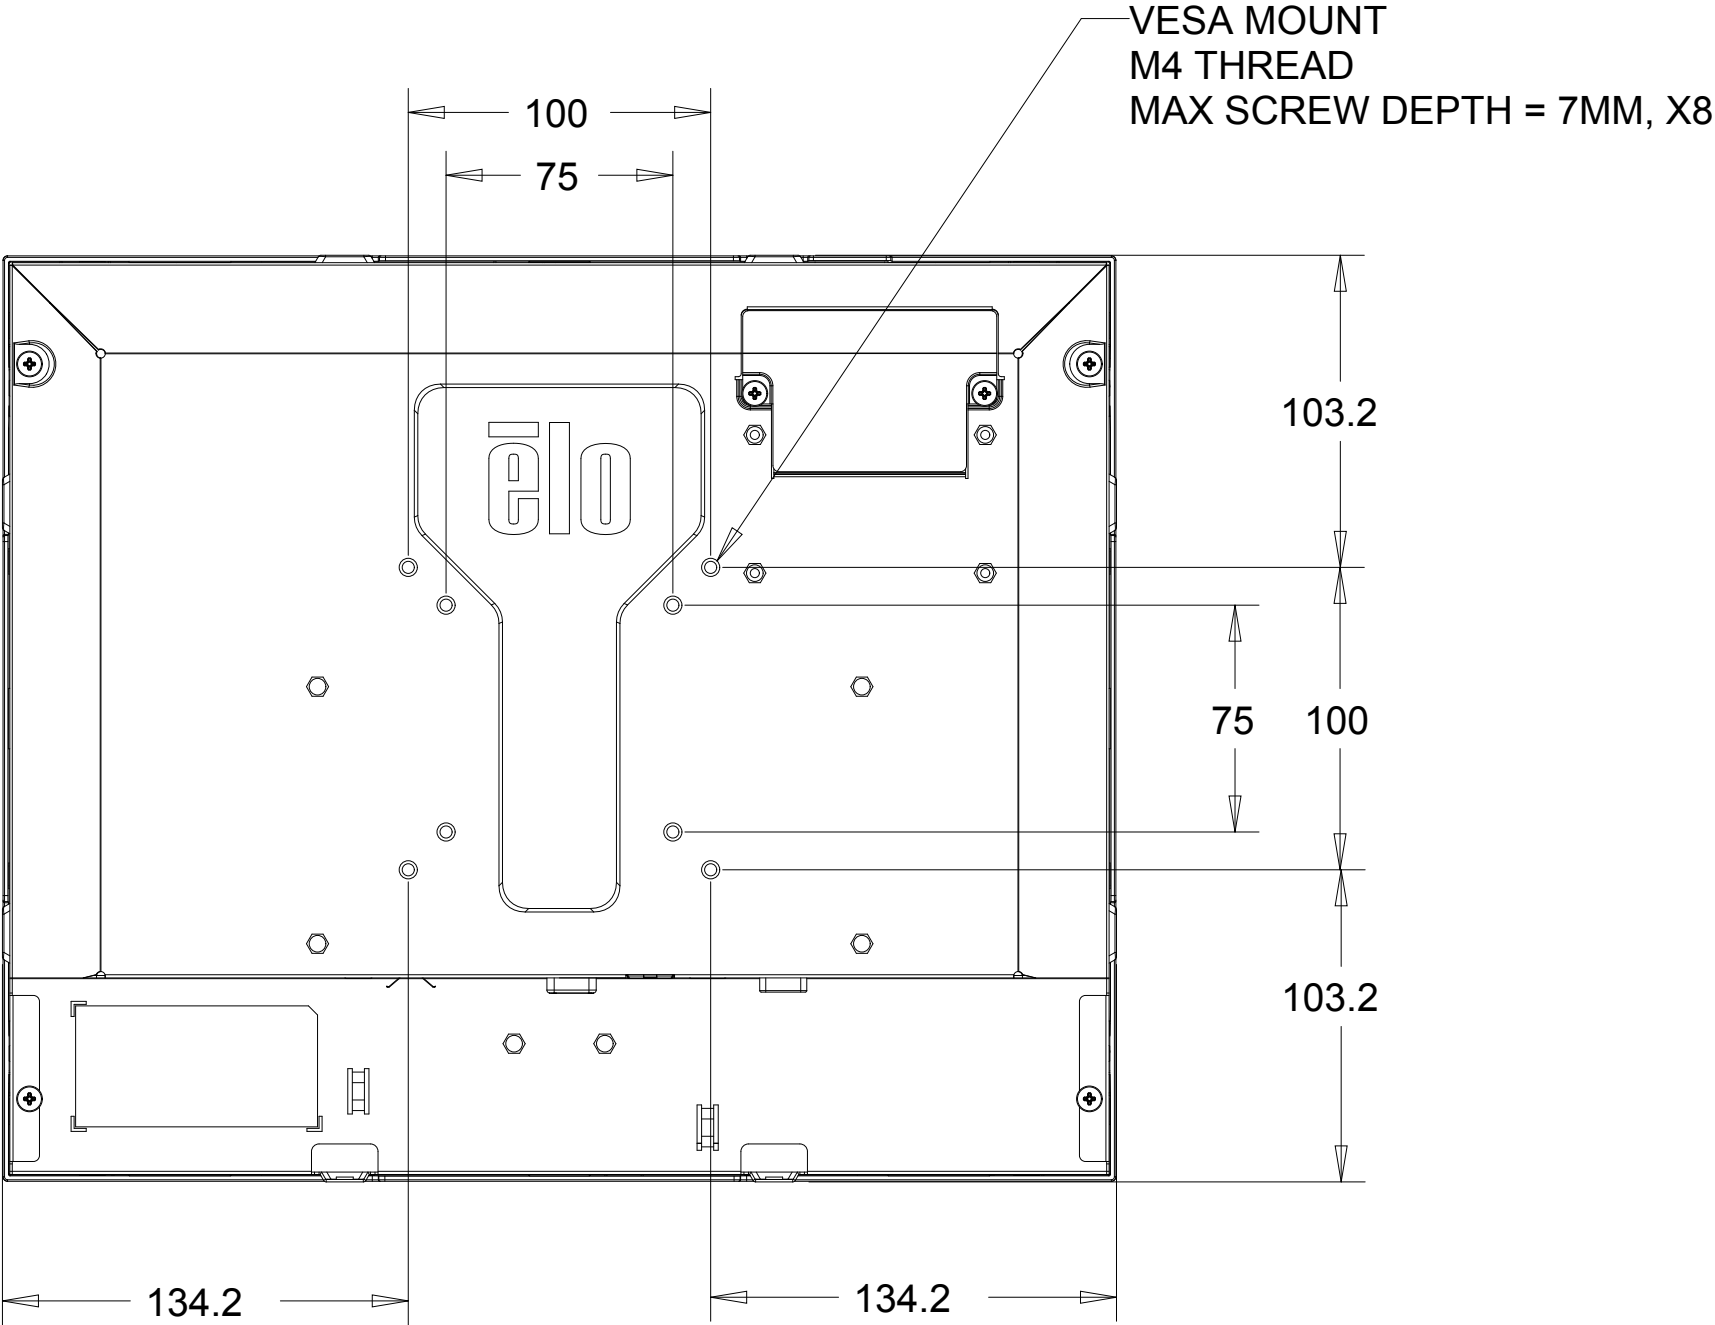
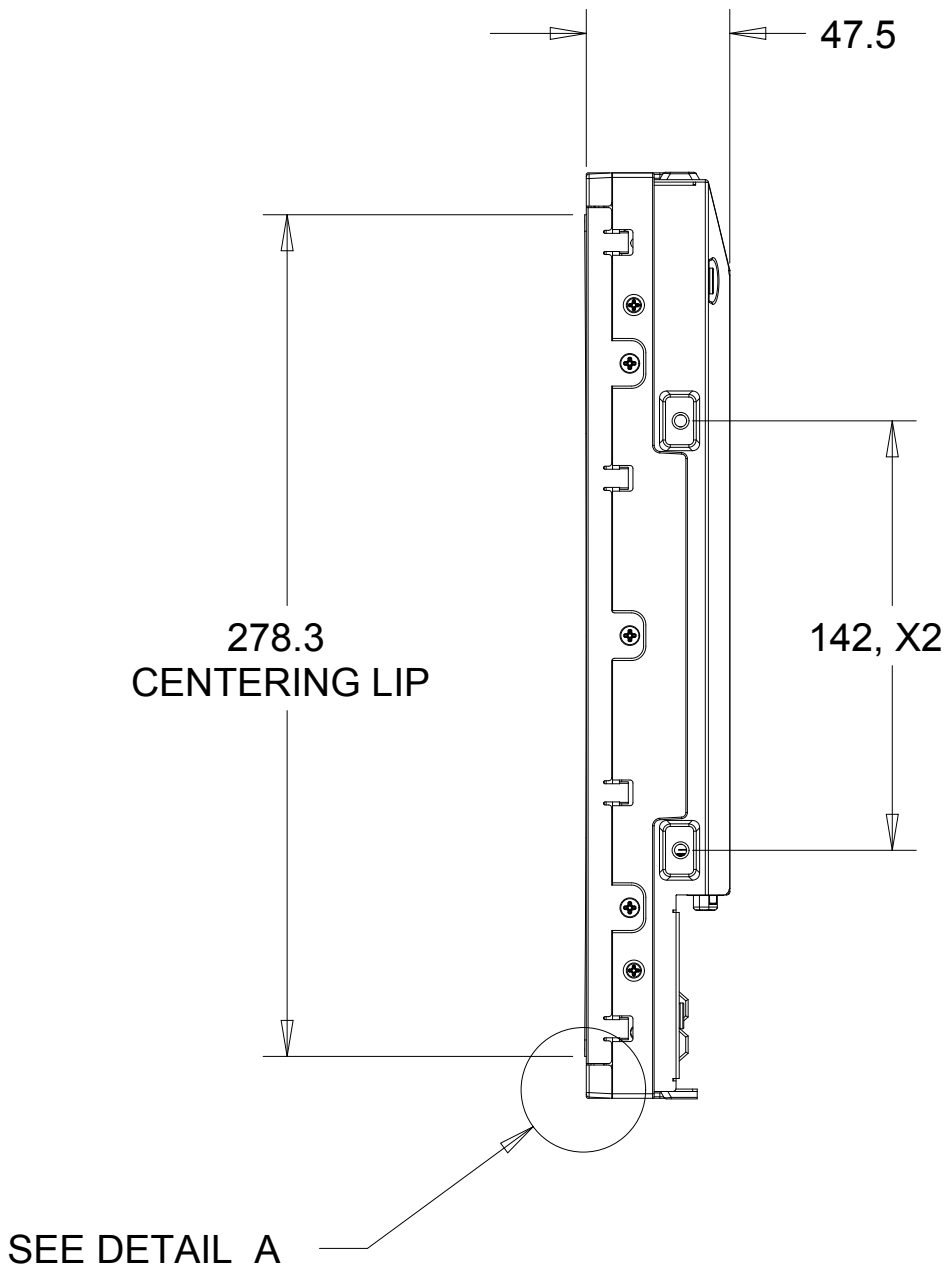
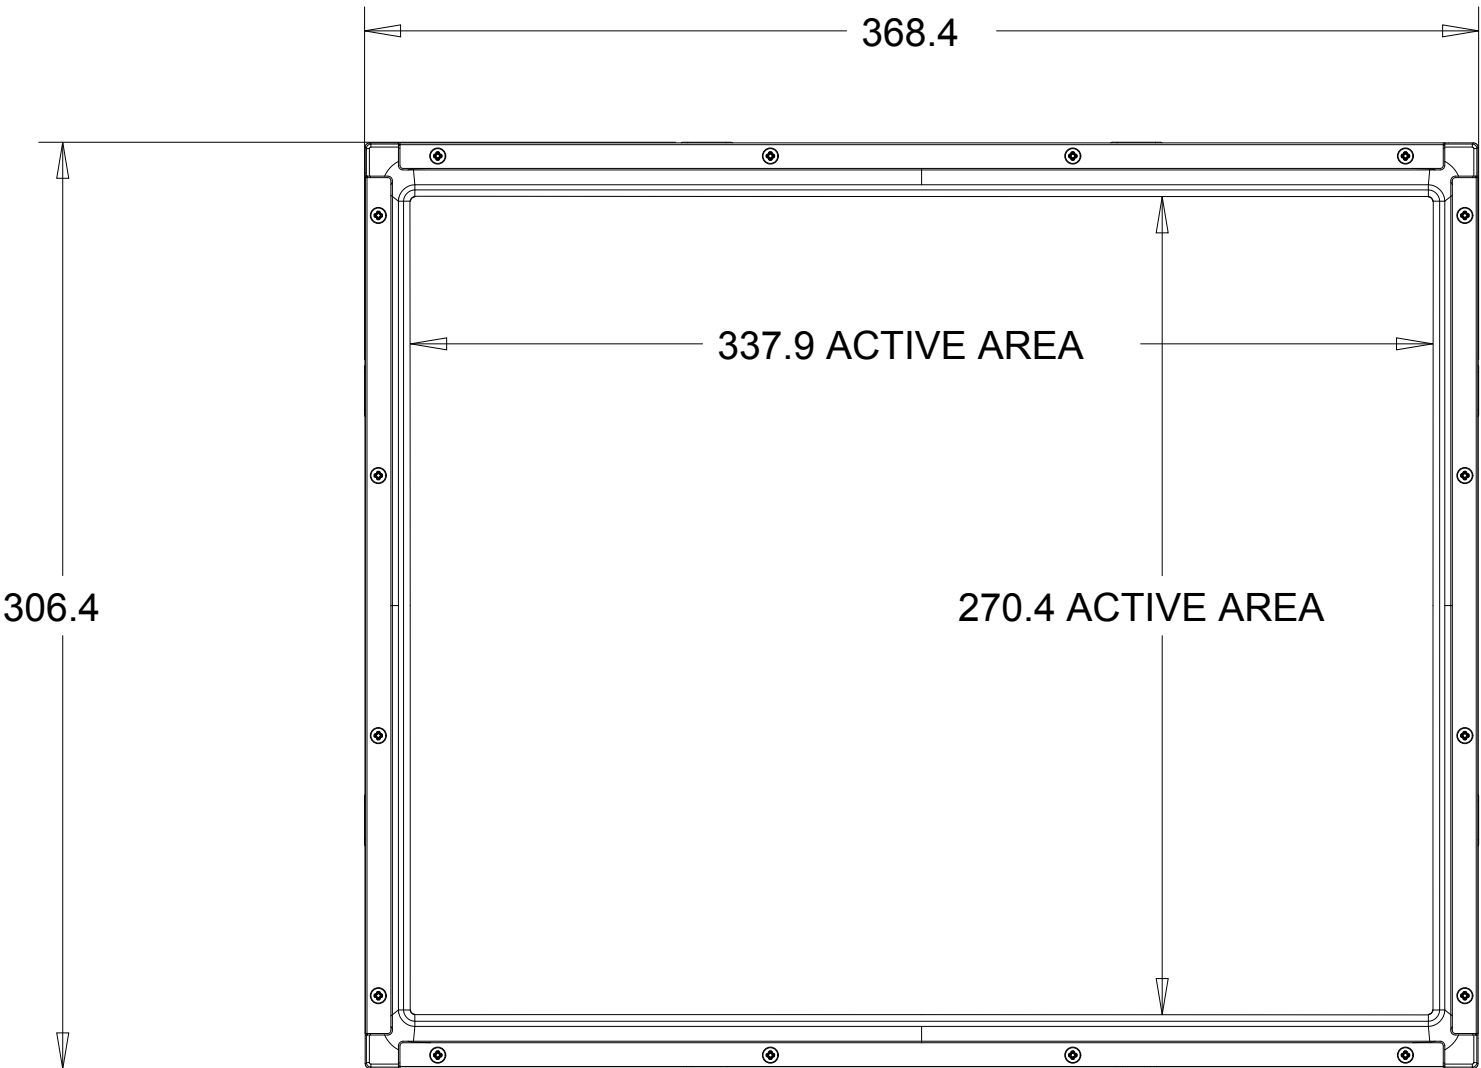


DETAIL A
CENTERING LIP, TYPICAL
SCALE 2.000

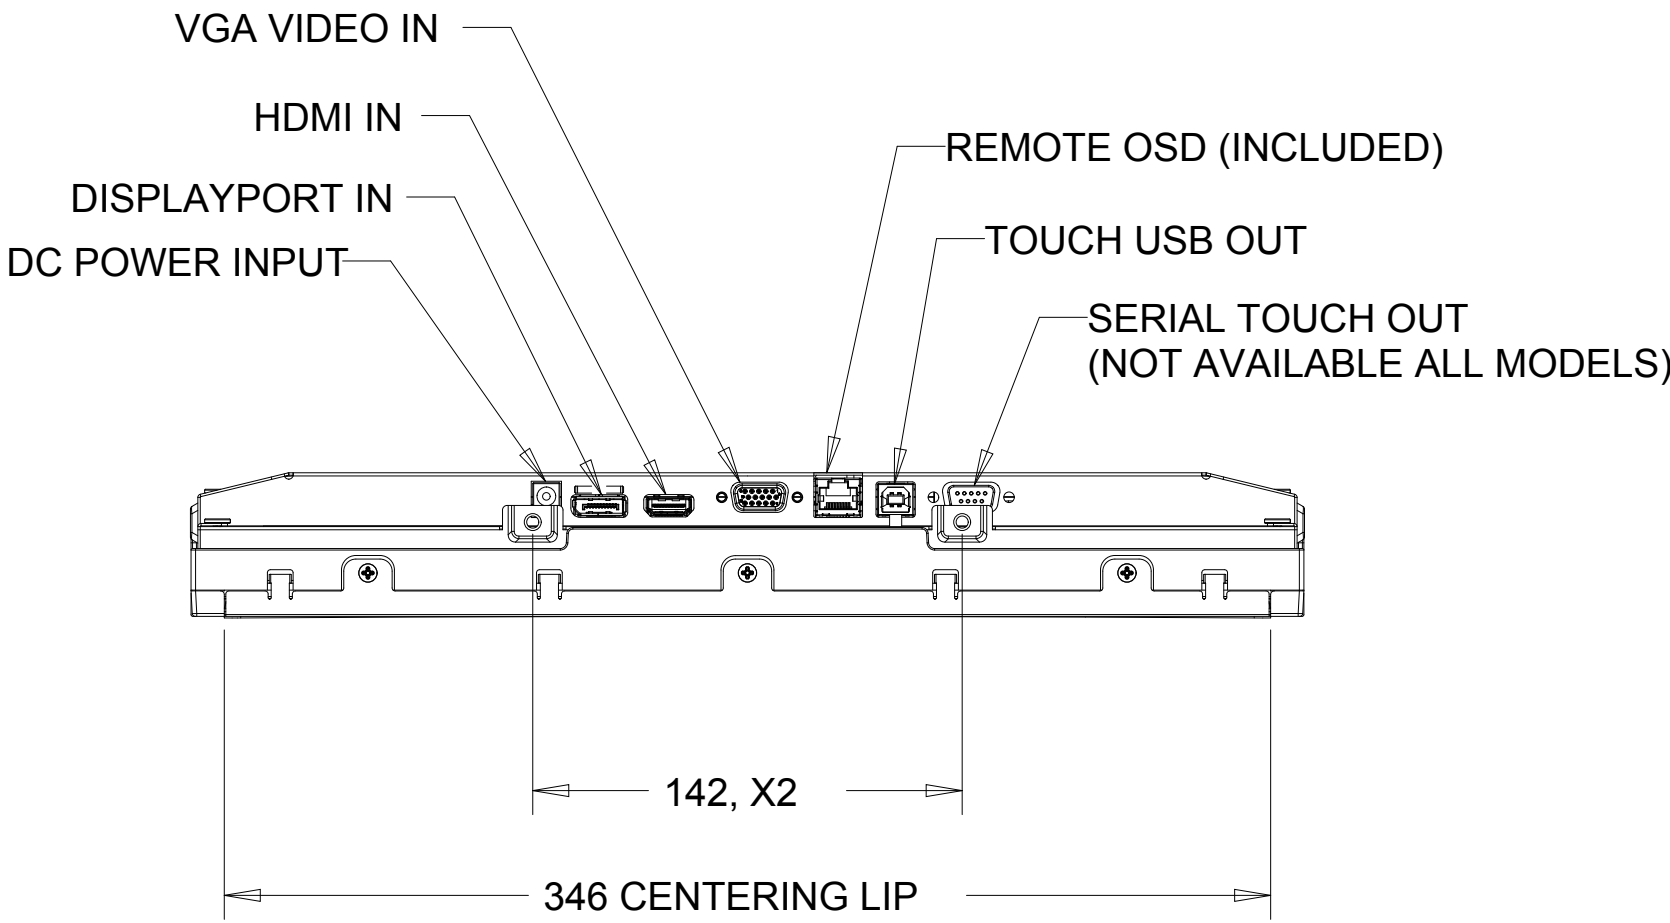


INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL

WITH SIDE MOUNTING BRACKETS (2 INCLUDED)
REPLACEMENT BRACKET KIT P/N E147211 AVAILABLE SEPARATELY

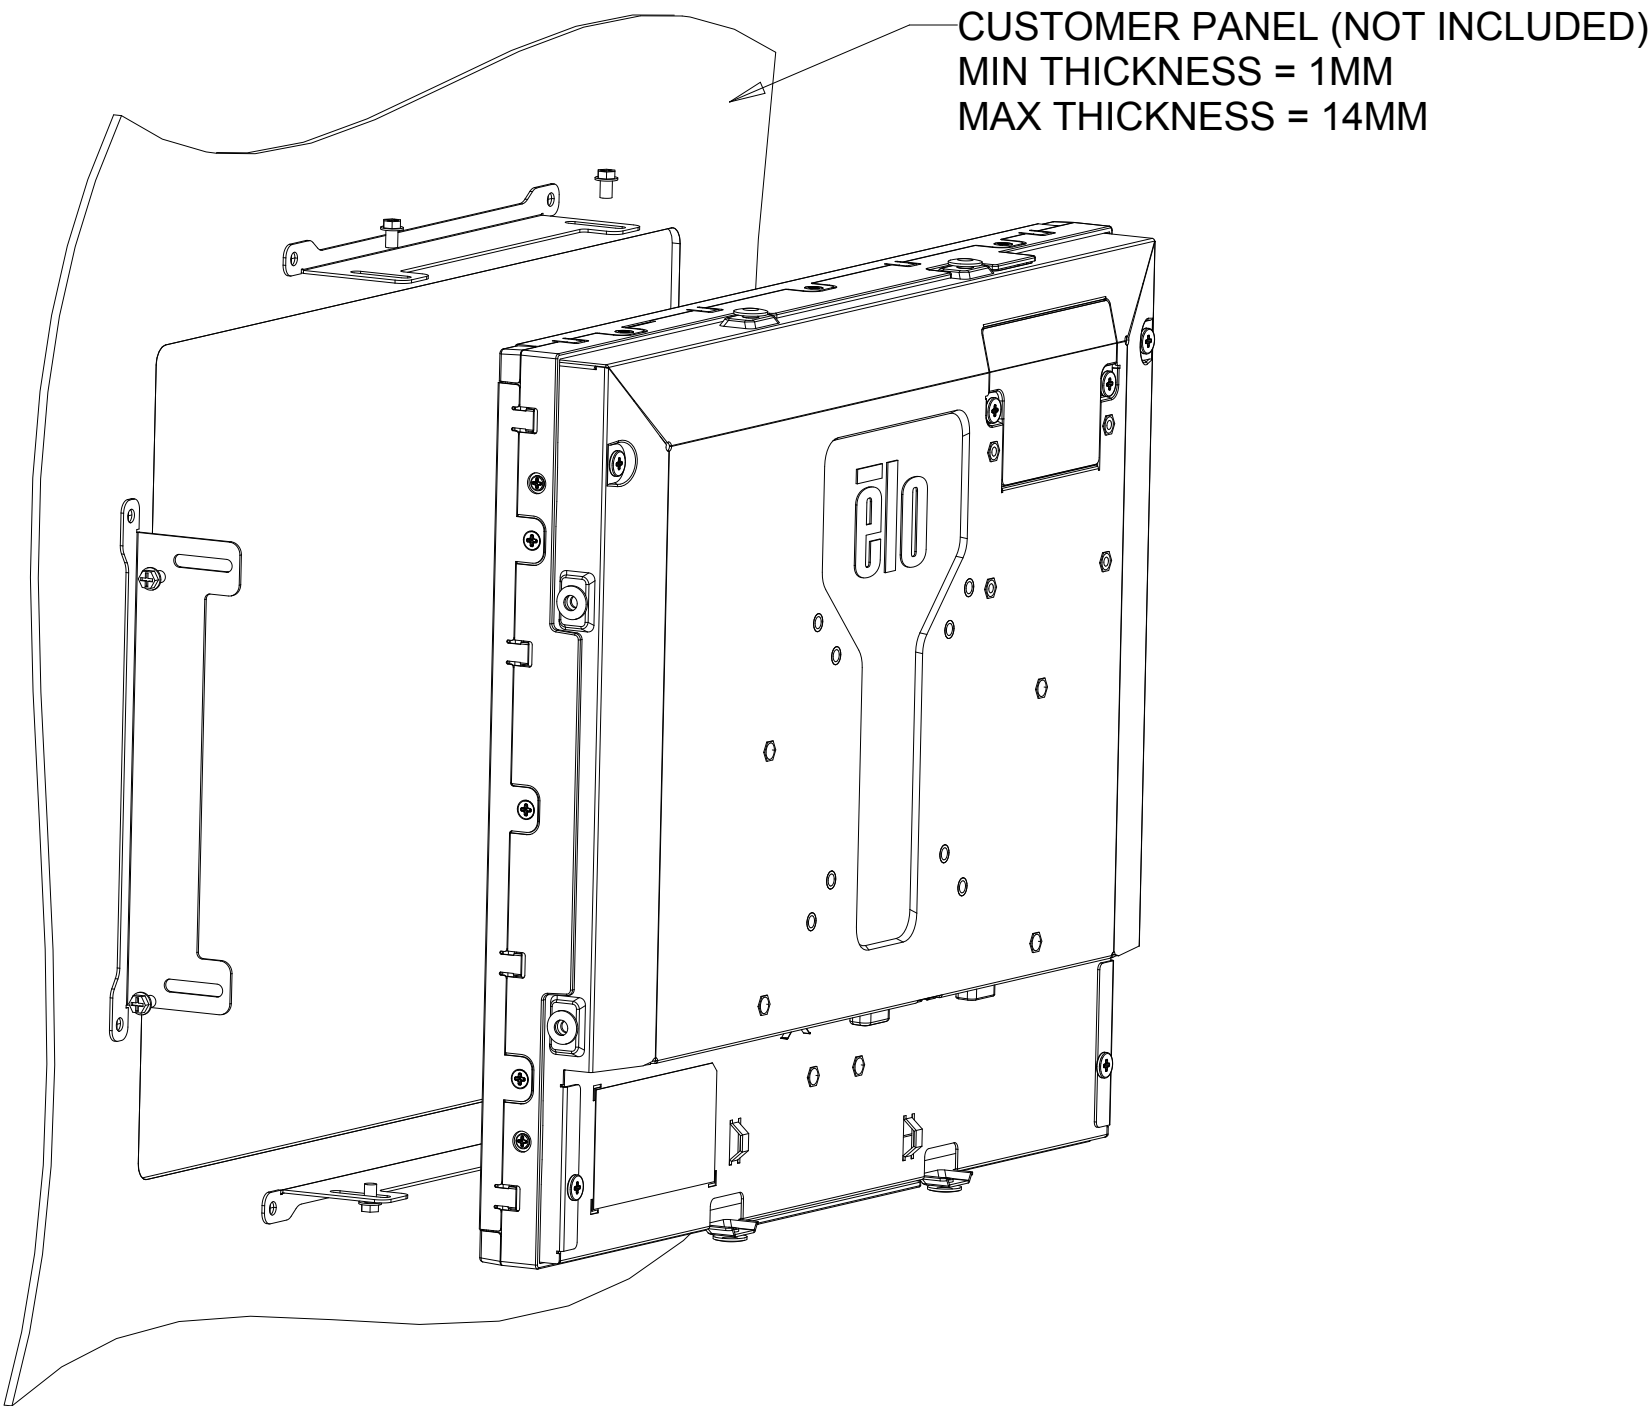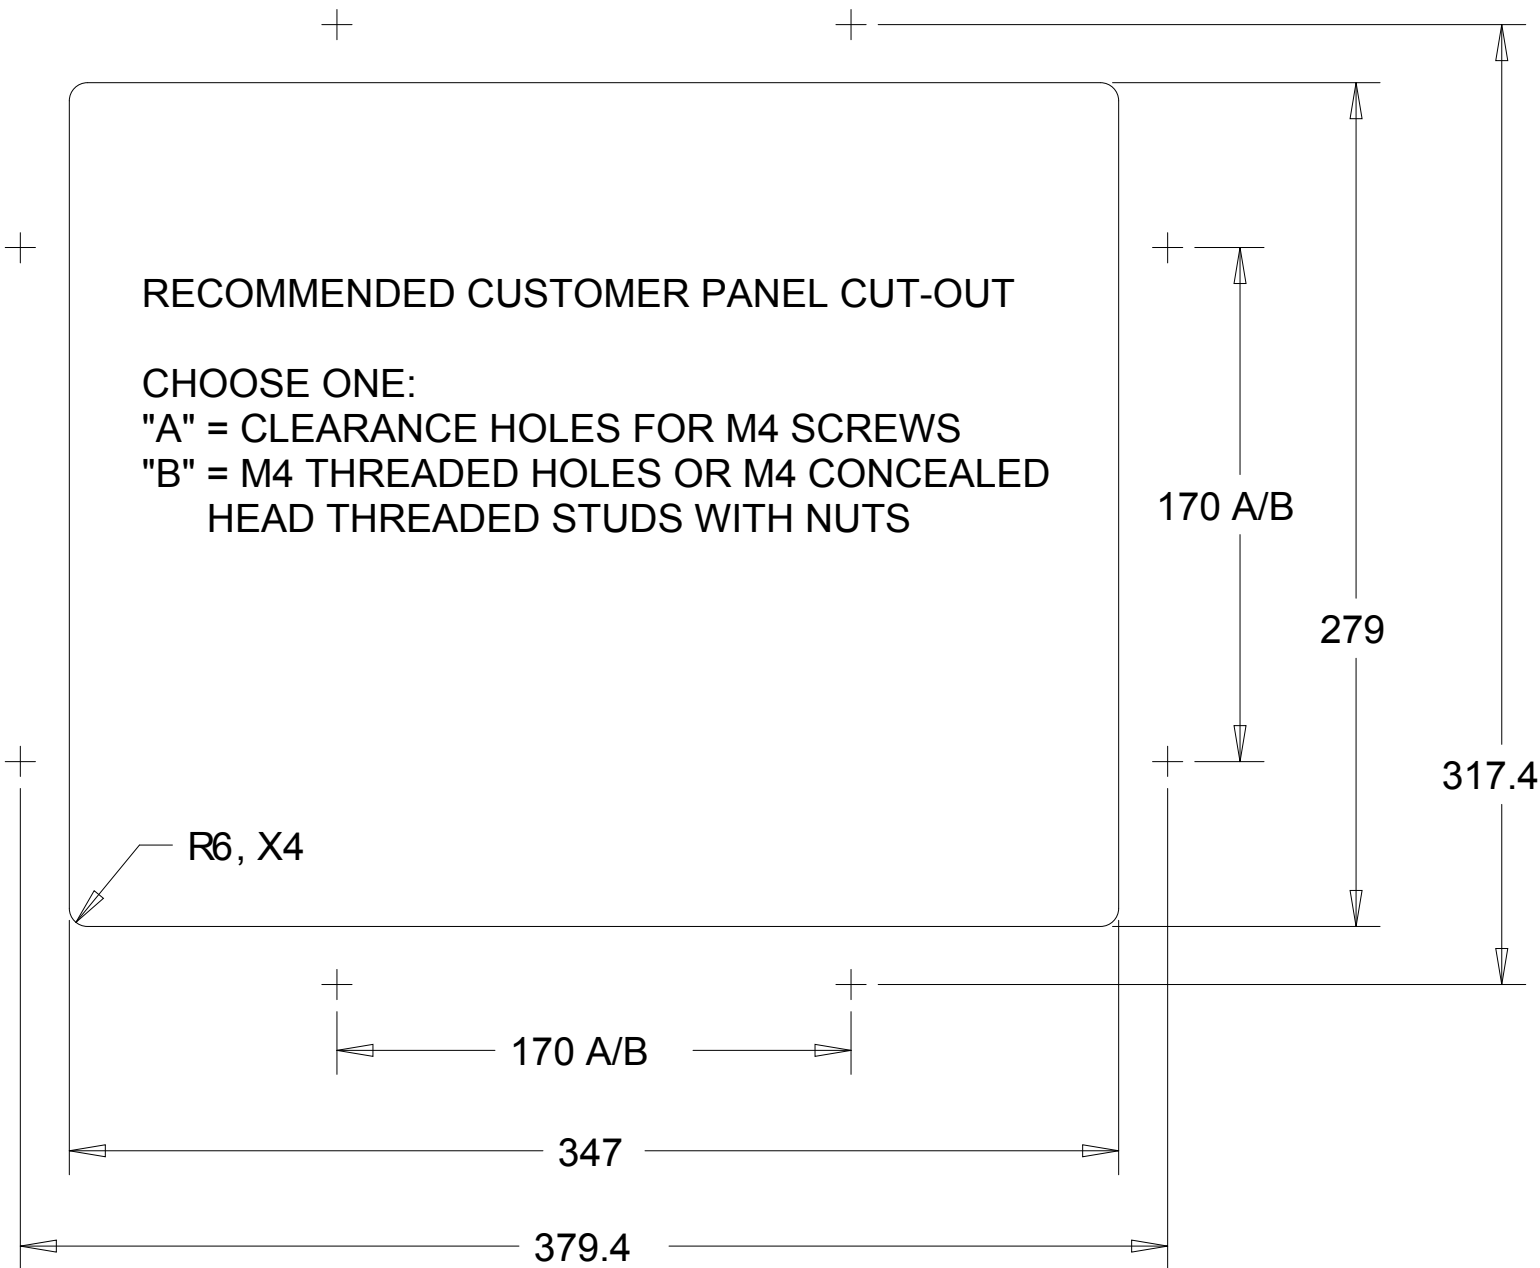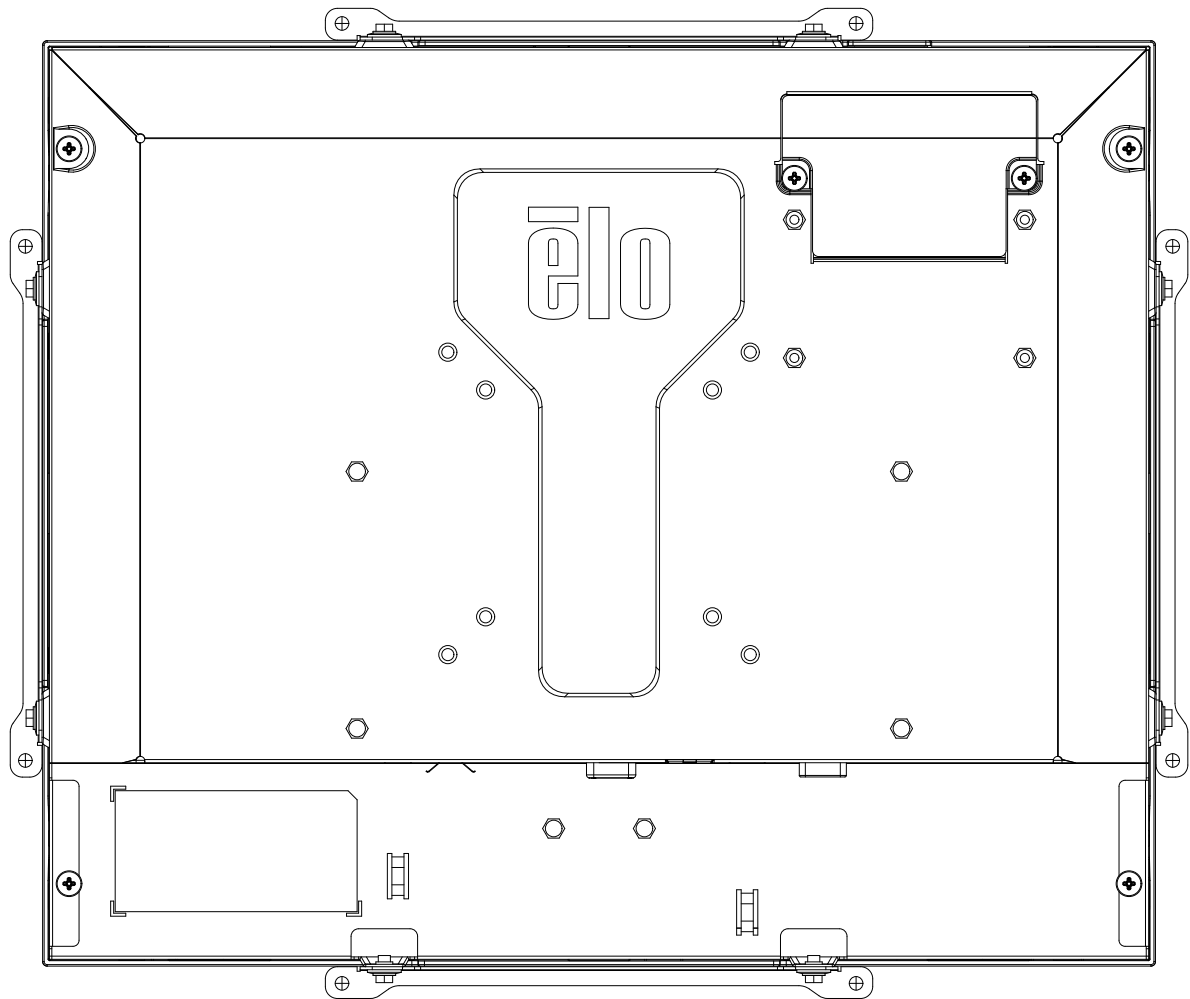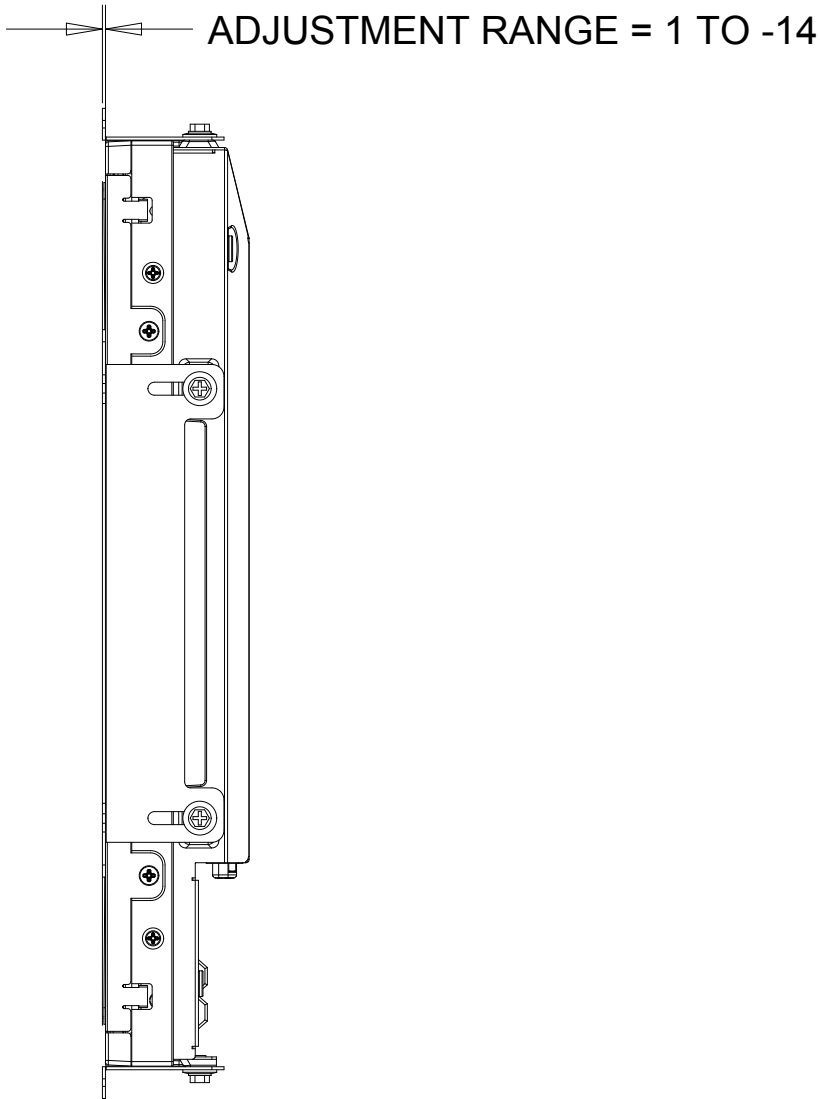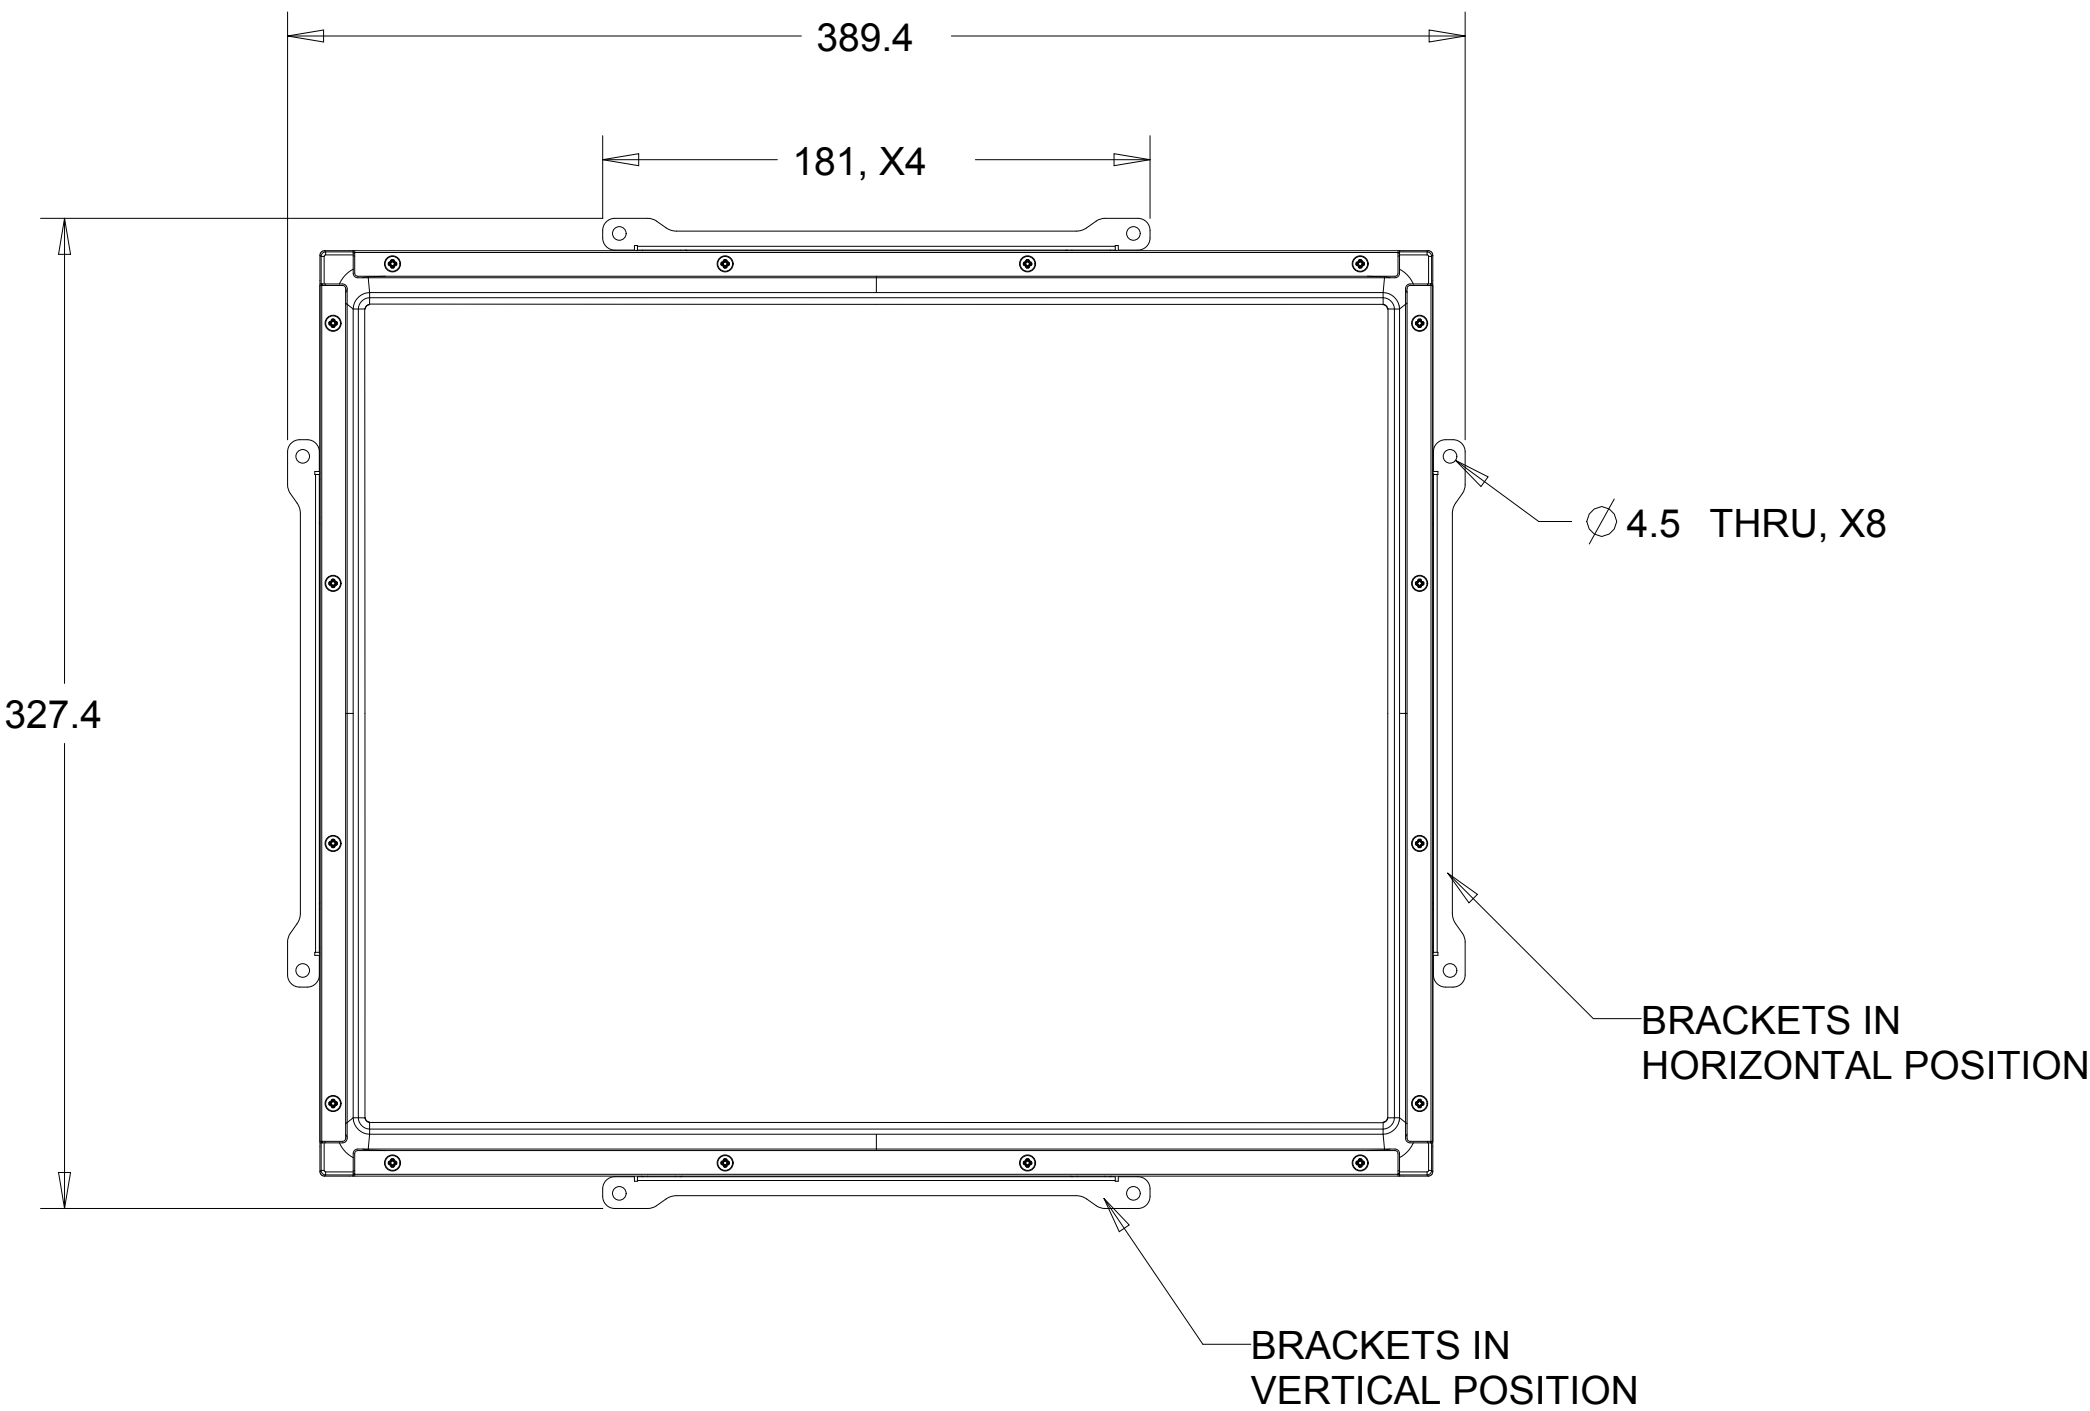

FRONT MOUNT KIT P/N E860319 FOR
INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL ONLY
(ORDERED SEPARATELY, CUSTOMER ASSEMBLED)

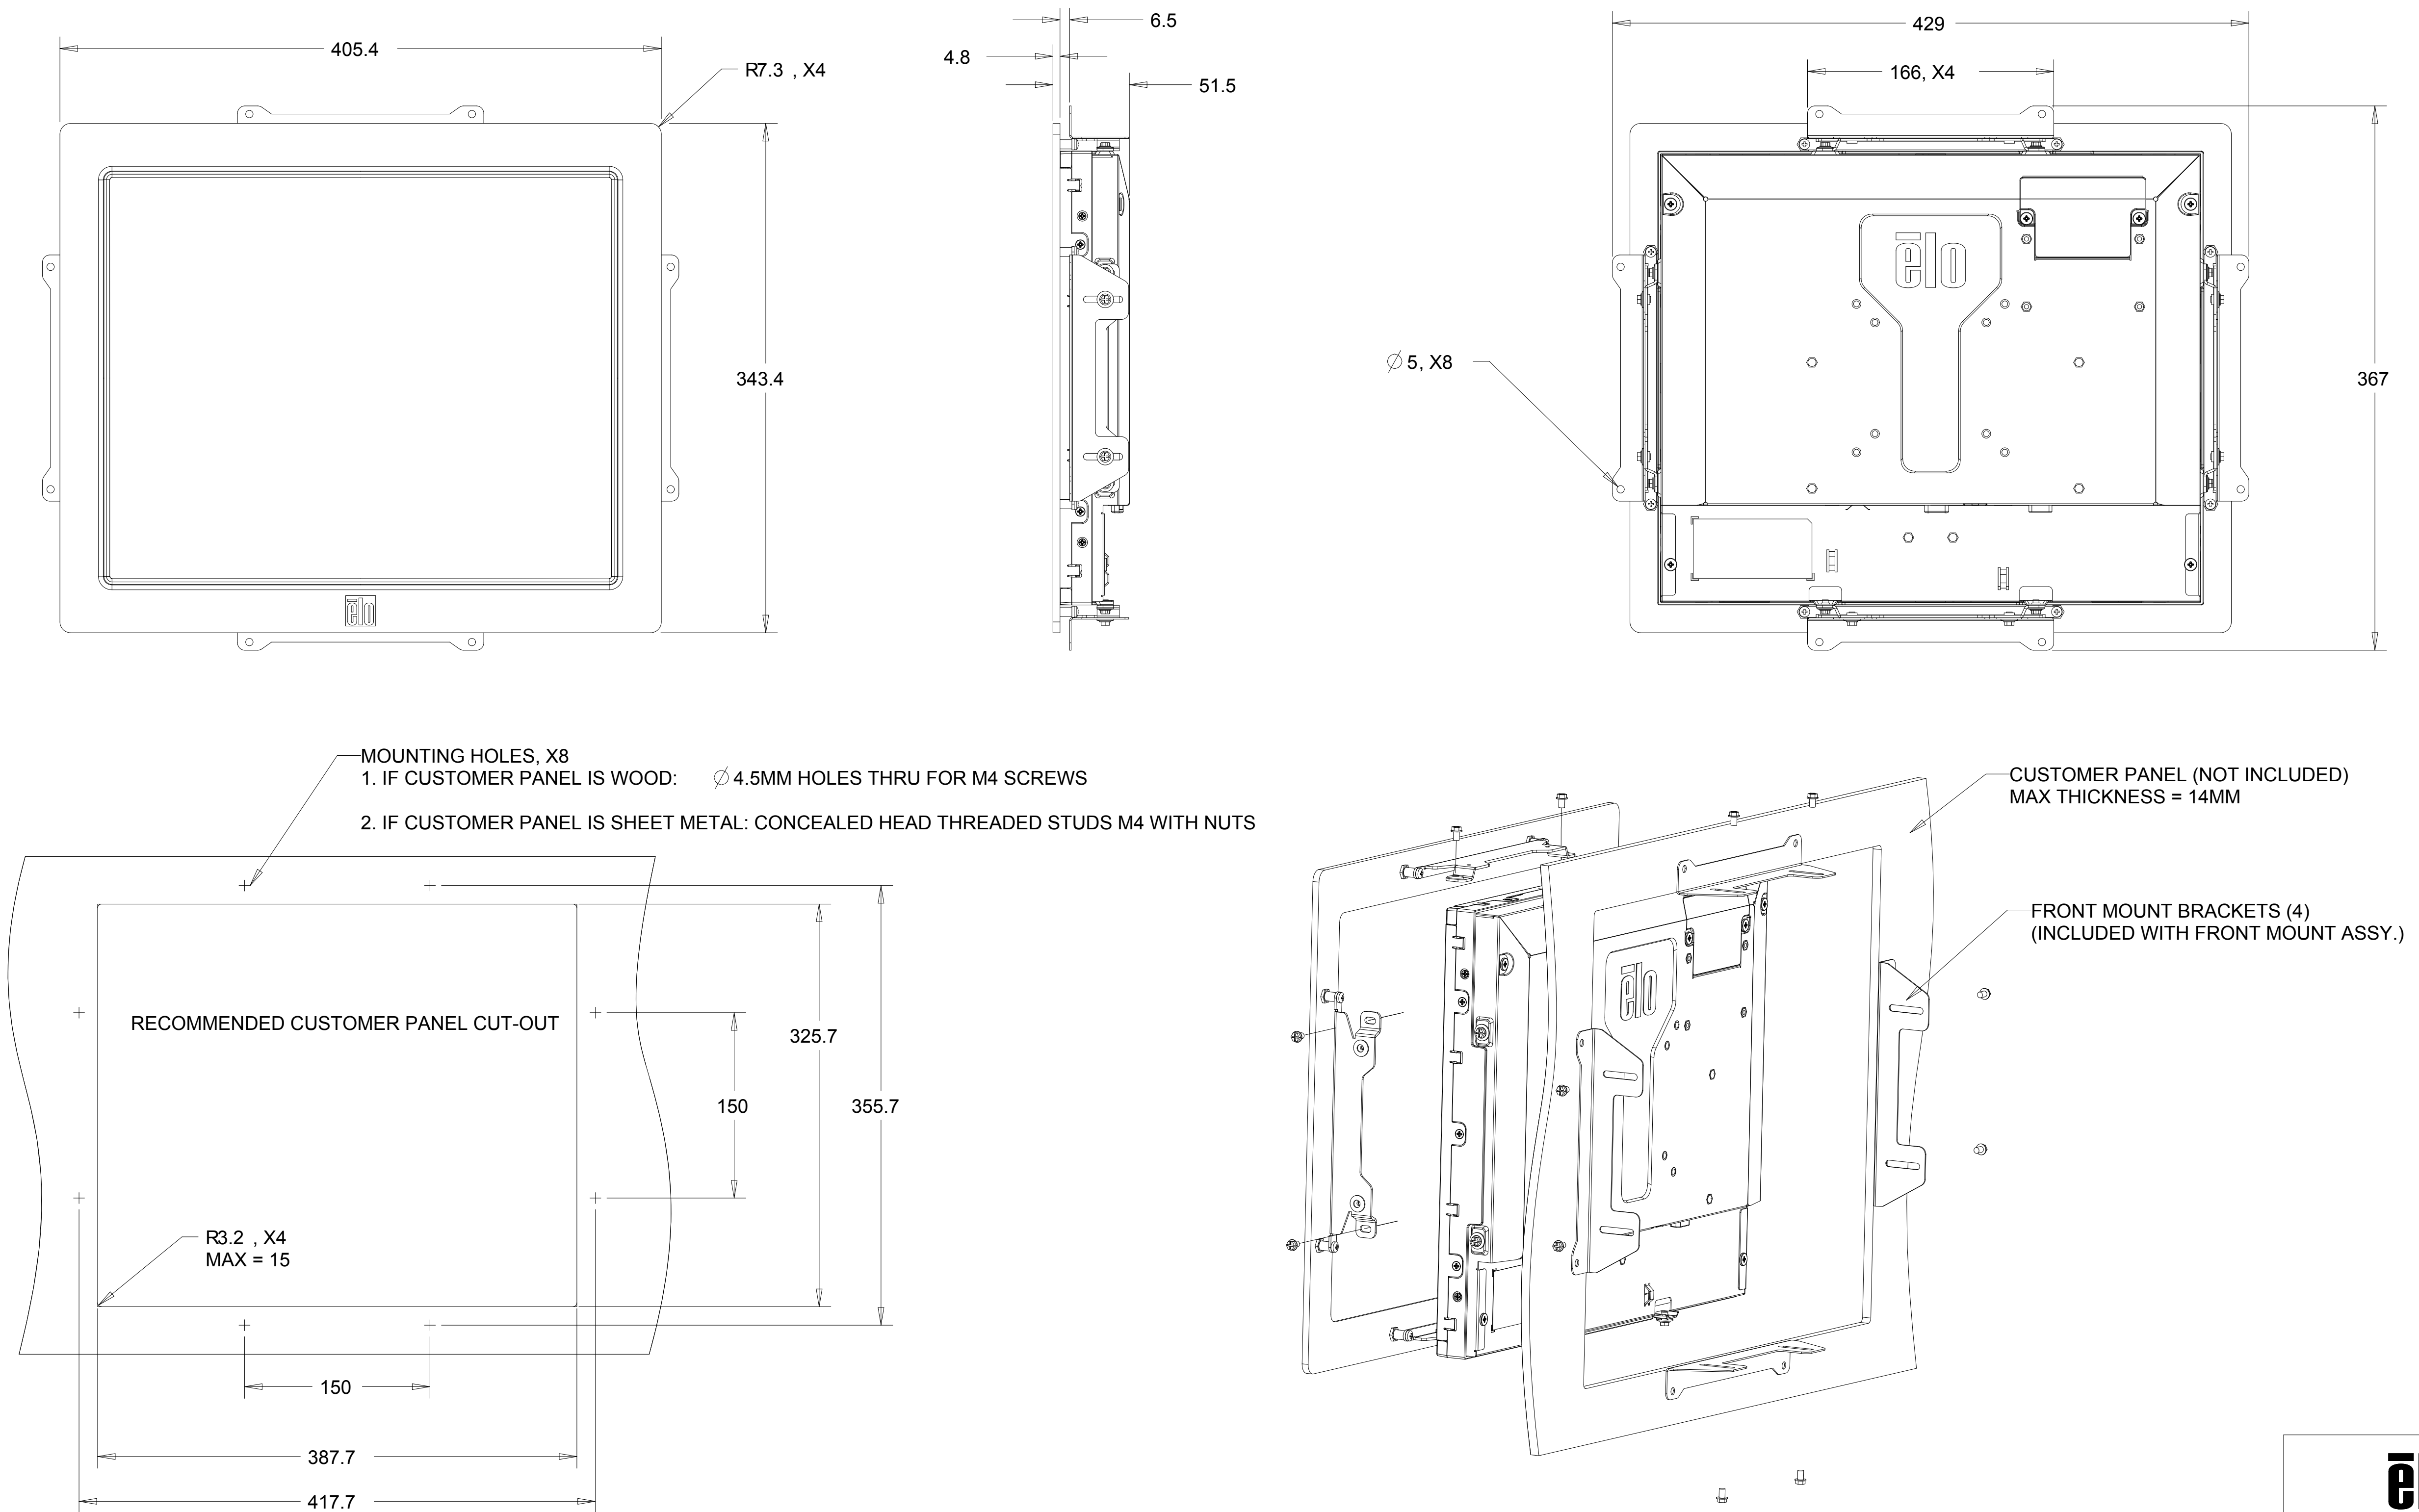

RACK MOUNT KIT P/N E939253 FOR
INTELLITOUCH, ACCUTOUCH, AND SECURETOUCH MODEL ONLY
(ORDERED SEPARATELY, CUSTOMER ASSEMBLED)

